


Left Crankcase Cover.Hand-operated Starting


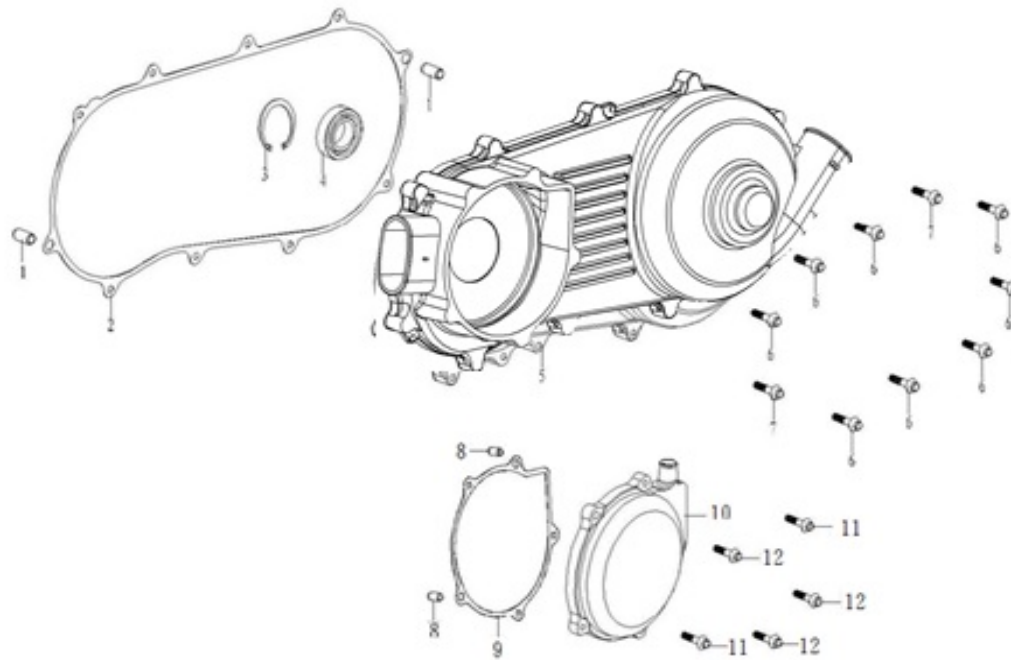


修補件 項次 料號 名稱 規格 數量

[BACK](#)

Item	Part No.	Part Name	Spec	Q'ty
1	173MM.02-02	定位銷φ10×16		2
2	173MM.15-03	左蓋墊片		1
3	GB893.1-1986-2	擋圈47		1
4	GB/T276-1994-11	軸承6005LU/P6		1
5	173MM.15-01	左曲軸箱蓋		1
6	GBT16674.1-2004-13	螺栓M6×28		8
7	GBT16674.1-2004-15	螺栓M6×40		2
8	173MM.15-05	定位銷φ8×14		2
9	173MM.15-04	左商標蓋墊片		1
10	173MM.15.01.01	啟動器蓋		1
11	GBT16674.1-2004-17	螺栓M6×32		2
12	173MM.01-05	螺栓M6×25		3

Cylinder Head Cover

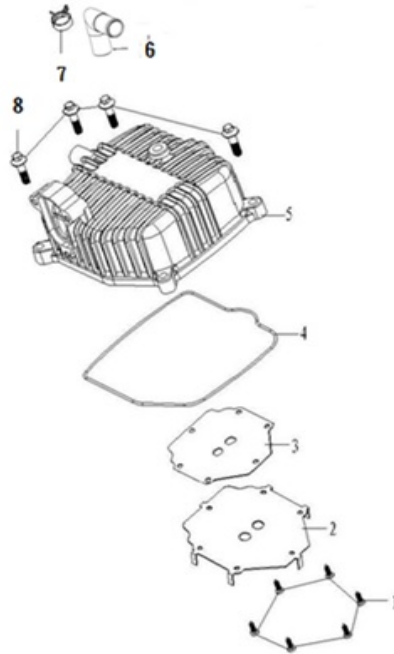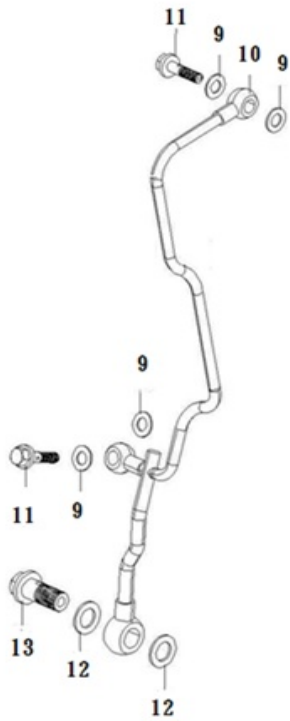

修補件

項次

料號

名稱

規格


數量

[BACK](#)

Item	Part No.	Part Name	Spec	Q'ty
1	GB845-1985-1	十字圓頭自攻螺絲		6
2	173MM.01.03-02	迷宮蓋板		1
3	12252-E33-000	通氣隔板墊片		2
4	173MM.01-01	缸頭蓋密封圈		1
5	173MM.01.03-01	汽缸頭蓋		1
6	12245-E33-000	通氣管-汽缸頭		1
7	173MM.01-06	束環φ14		2
8	173MM.01-05	螺栓M6×25		4
9	173MM.01-08	墊圈φ8×15×1		4
10	173MM.01.04	油管組件		1
11	173MM.01-09	油管螺栓M8		2
12	93105-12020-20-2	鋁平面墊圈		2
13	XD250-2020001A	油管螺栓		1

Cylinder Head


45% 25 1/4"

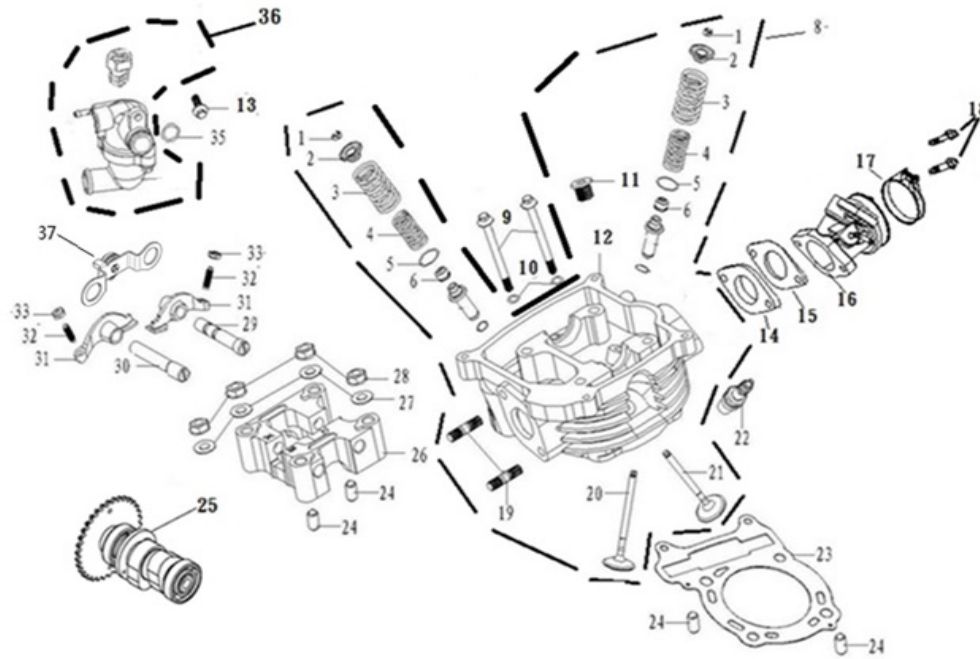

項次	料號	名稱	規格	數量
Item	Part No.	Part Name	Spec	Q'ty
1	173MM.02.01-07	汽門鎖扣		4
2	173MM.02.01-05	汽門彈簧定位器		2
3	14735-E10-000	汽門外彈簧		2
4	14736-E10-000	汽門內彈簧		2
5	173MM.02.01-06	汽門彈簧座圈		2
6	173MM.02.01.02	閥門徑封		2
8	173MM.02.01.01-01-YY	汽缸頭總成		1
9	GBT16674.1-2004-1	螺栓M6×110		2
10	156FMI.01.01-03	密封墊圈6		2
11	173MM.02.01.01-03	堵頭		1
12	173MM.02.01.01-01	汽缸頭		1
13	GBT16674.1-2004-2	螺栓M6×18		1
14	14712-E17-000	歧管隔熱片		1
15	14711-E17-000	隔熱板墊片		2
16	16410-E17-000	進氣歧管		1
17	97414-050090	束環		1
18	91760-06030-05G	六角承窩螺栓		2
19	173MM.02.01-09	雙頭螺柱M8×32		2
20	173MM.02.01-02	排氣門		1
21	173MM.02.01-01	進氣門		1
22	98069-CR8E-000	火星塞		1
23	178MN.02-01	氣缸頭墊片		1
24	173MM.02-02	定位銷φ10×16		4
25	25100-E11-001	凸輪軸組(300cc)		1
26	173MM.02.03-03-YY	凸輪軸固定座		1
27	GB95-1985-1	墊圈7		4
28	GB/T6177-2000-1	缸頭螺母M7		4
29	173MM.02.03-06	進汽門搖臂軸		1
30	173MM.02.03-01	排汽門搖臂軸		1
31	173MM.02.03-02	汽門搖臂		2
32	173MM.02.03-04	汽門調節螺絲		2
33	173MM.02.03-05	汽門調節螺母		2
35	173MM.02.05-04	O形圈17.5×1.9		1
36	173MM.02.05	節溫器總成		1
37	25308-E11-000	止動板		1

[BACK](#)

Cylinder. Piston. Crankshaft

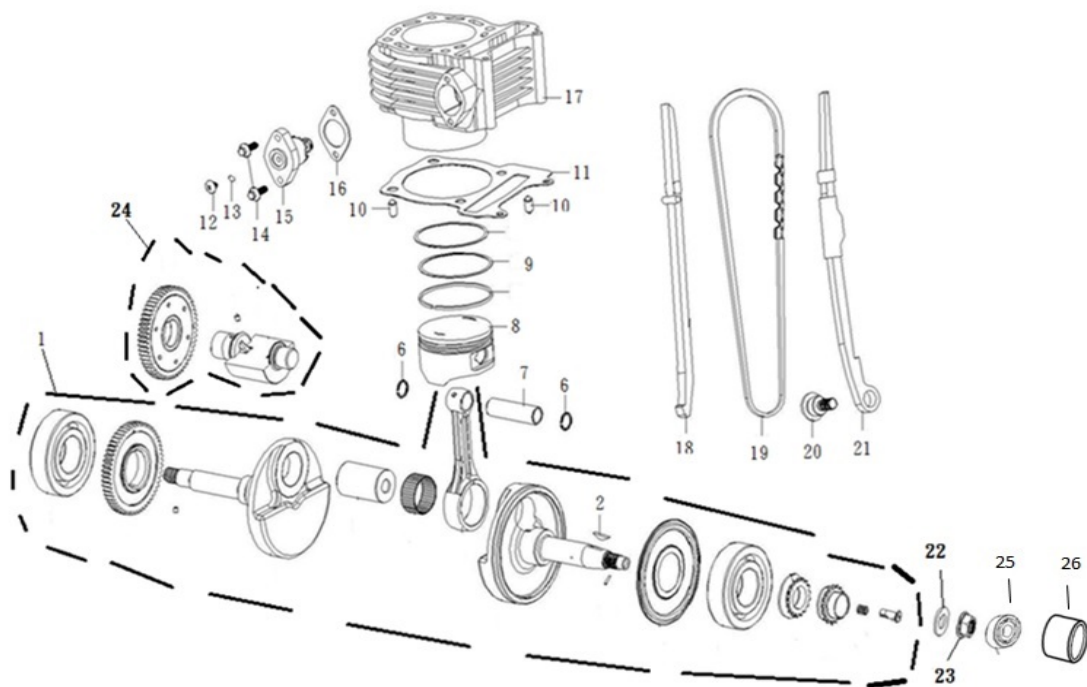


修補件 項次 料號 名稱 規格

Item	Part No.	Part Name	Spec
1	178MN.10	曲軸總成	
2	13010-E10-000	半圓鍵	
6	13410-E10-000	活塞銷夾環	
7	13400-E17-000	活塞銷	
8	13300-E33-000	活塞	
9	13310-E33-000	活塞環組	
10	173MM.02-02	定位銷 $\phi 10 \times 16$	
11	178MN.04-01	汽缸墊片	
12	173MM.03.04-01	堵釘	
13	173MM.03.04-12	O形圈9.5×1.5	
14	GBT16674.1-2004-3	螺栓M6×22	
15	173MM.03.04	正時鏈條調整器	
16	173MM.03-01	張緊器墊片	
17	12100-E33-000	汽缸	
18	173MM.03.03	鏈條導向板元件	
19	173MM.03.01	正時鏈條6.35×102	
20	173MM.03-02	張緊板固定螺栓	
21	173MM.03.02	鏈條張緊板組件	
22	173mm. 10-04	止推墊片	
23	92120-14-21C	六角緣面螺帽	
24	173MM.10.03	平衡軸總成	
25	95100-6001JRX3	滾珠軸承	
26	93325-E33-000	襯套	

修補件	項次	料號	名稱	規格
-----	----	----	----	----


Right Crankcase Cover

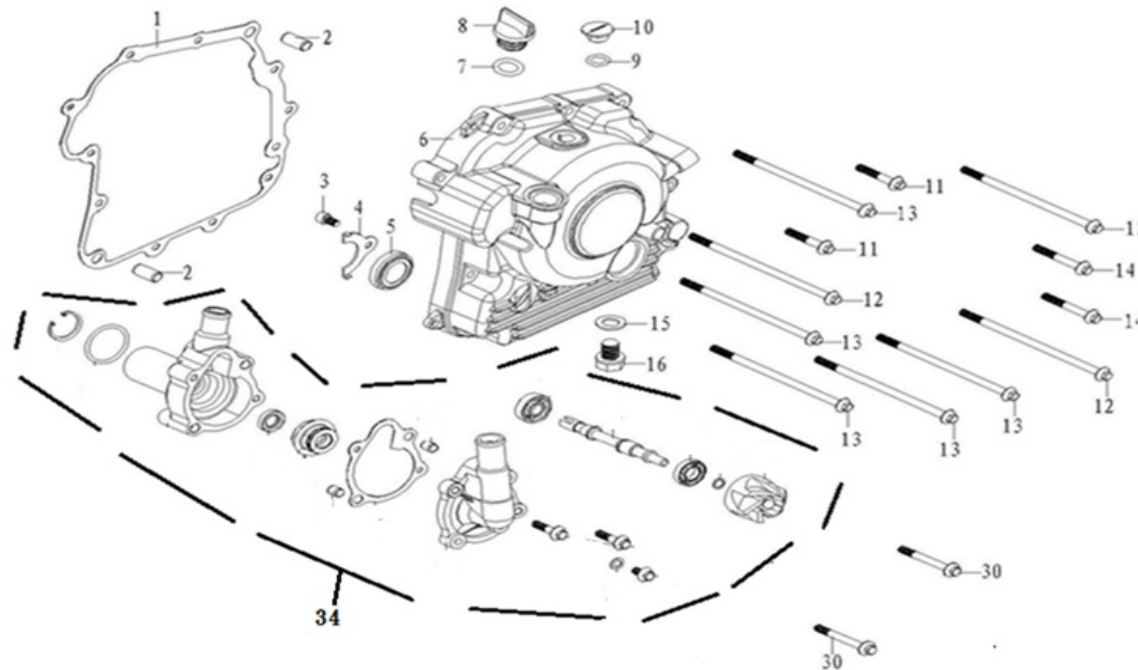

Item	Part No.	Part Name	Spec
1	173MM.06-04	右曲軸箱蓋墊片	
2	173MM.02-02	定位銷 $\phi 10 \times 16$	
3	GB/T70.1-2000-1	內六角螺栓 M6×10	
4	173MM.06-05	油鏡壓板	
5	173MM.06-01	油鏡組件	
6	173MM.06-01	右曲軸箱蓋	
7	173MM.06-03	O形圈 17.8×3.55	
8	173MM.06-02	油尺規	
9	GB3452.1-1992-1	O形圈 14×2.65	
10	156FMI.06-07	螺塞	
11	GBT16674.1-2004-4	螺栓 M6×35	
12	GBT16674.1-2004-5	螺栓 M6×135	
13	GBT16674.1-2004-6	螺栓 M6×125	
14	GBT16674.1-2004-7	螺栓 M6×45	
15	93105-12020-20-2	鋁平面墊圈	
16	156FMI.05-07	放油螺釘	
30	GBT16674.1-2004-8	螺栓 M6×55	
34	173MM.05	水泵總成	


修補件 項次 料號 名稱 規格 數量
[BACK](#)

Crank Case

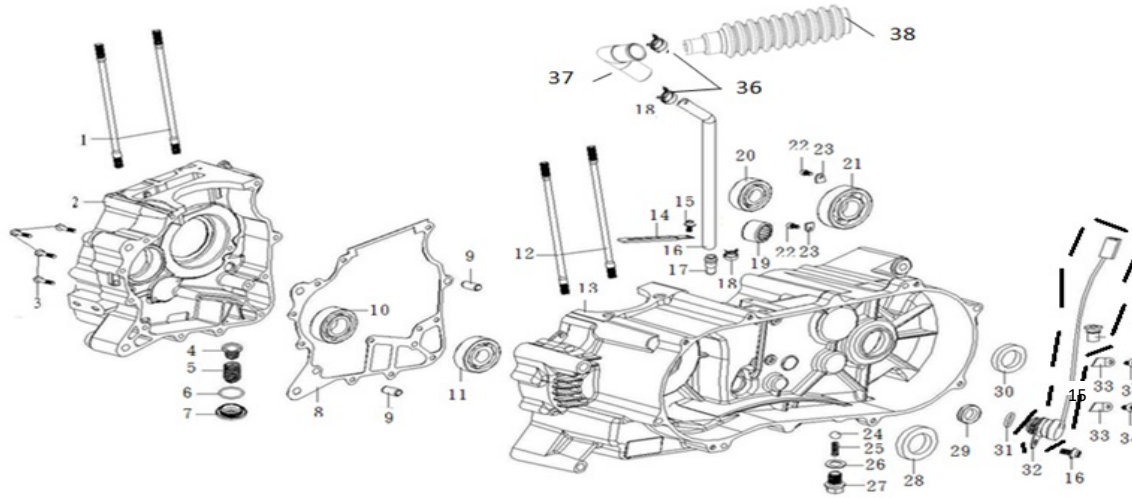

Item	Part No.	Part Name	Spec	Q'ty
1	173MM.09-02-YY	右箱雙頭螺柱		2
2	173MM.09.01	右曲軸箱體組件		1
3	GBT16674.1-2004-11	螺栓M6×50		4
4	173MM.09.05	濾油網組合		1
5	173MM.09-04	濾油網彈簧		1
6	173MM.09-05	O形圈30.5×3		1
7	173MM.09-06	濾油網帽蓋		1
8	173MM.09-01	曲軸箱墊片		1
9	173MM.02-02	定位銷φ10×16		2
10	GB/T276-1994-10	軸承6304		1
11	GB/T276-1994-4	軸承6205/P6		1
12	173MM.09-03-YY	左箱雙頭螺柱		2
13	173MM.09.02	左曲軸箱體組件		1
14	173MM.09-07	檔顯線纏繞線夾		1
15	GBT16674.1-2004-10	螺栓M6×10		2
16	173MM.09-14	左箱體通氣管		1
17	173MM.01.03-04	通氣管接頭		1
18	173MM.01-06	束環φ14		1
19	GB/T290-1989-1	滾針軸承HK2016		1
20	GB/T276-1994-5	軸承6204/P6		1
21	GB/T276-1994-7	軸承6305		1
22	GB/T70.1-2000-1	內六角螺釘M6×10		2
23	173MM.09-09	軸承壓板		2
24	GB308-1989-1	鋼球φ9.5		1
25	173MM.09-12	彈簧		1
26	173MM.09-11	換檔定位螺栓墊片		1
27	173MM.09-10	換檔定位螺栓		1
28	173MM.09.03	油封27×42×7		1
29	173MM.09.07	油封22×14×5		1
30	173MM.09.04	油封25×40×8		1
31	173MM.09.06-02	O形圈17.6×2.2		1
32	61210-E33-000	檔位開關		1
33	173MM.09-13	檔顯線壓板		2
34	GBT16674.1-2004-12	螺栓M6×12		2
36	97411-A01-000	束環		2
37	173MM.01.09-15	通氣管接頭		1
38	93514-A13-000	回壓管		1

Starting Oil Pump

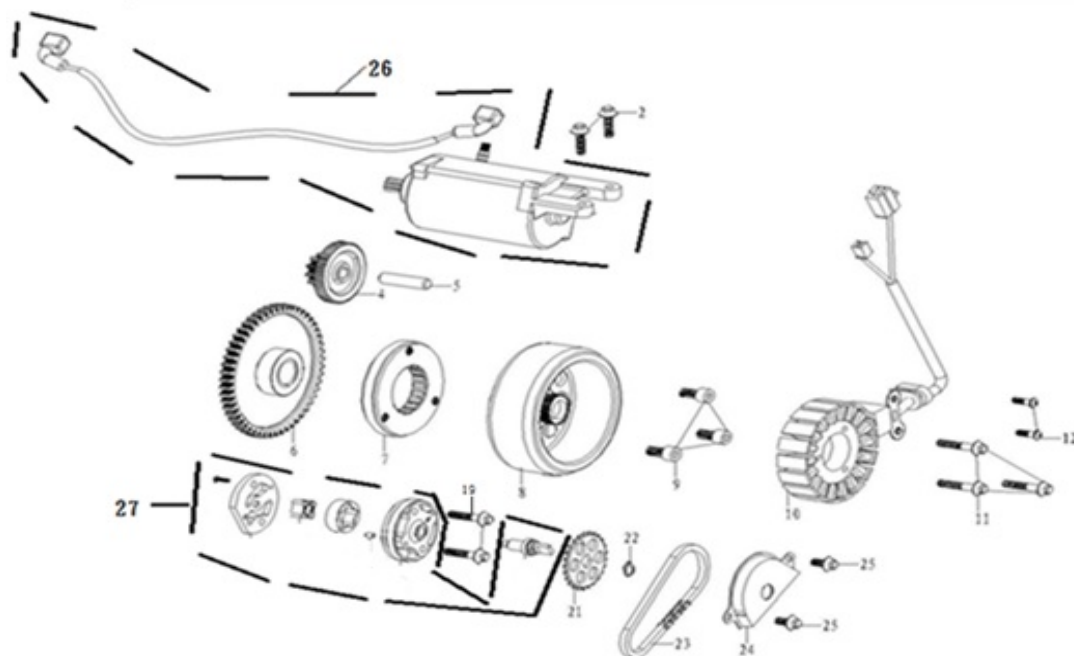


修補件	項次	料號	名稱	規格	數量
	Item	Part No.	Part Name	Spec	Q'ty
	2	GBT16674.1-2004-3	螺栓M6×22		2
	4	22120-E33-000	起動惰齒輪		1
	5	11344-E33-000	惰齒輪軸-起動		1
	6	22110-E10-103	起動離合器齒輪		1
	7	22100-E10-200	起動離合器組		1
	8	173MM.07.01	飛輪組合		1
	9	91765-08017-05B	圓頭內六角螺栓(耐落)		3
	10	173MM.07.02	定子組合		1
	11	91760-05025-04W	內六角承窩螺栓		3
	12	GB/T823-1988-1	十字槽盤頭螺釘M5×16		2
	19	GBT16674.1-2004-13	螺栓M6×28		2
	21	173MM.11-01	機油泵從動鏈輪		1
	22	GB/T894.1-1986-1	擋圈 10		1
	23	173MM.11.01	油泵鏈條6.35×46		1
	24	173MM.11-02	機油泵鏈罩		1
	25	GBT16674.1-2004-12	螺栓M6×12		2
	26	31200-E33-000	起動馬達		1
	27	173MM.11.02	機油泵總成		1

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows: 1 (a small circular part), 2 (a small circular part), 3 (a small circular part), 4 (a small circular part), 5 (a small circular part), 6 (a small circular part), 7 (a small circular part), 8 (a small circular part), 9 (a small circular part), 10 (a large circular part), 11 (a large circular part), 12 (a small circular part), 13 (a small circular part), 14 (a small circular part), and 15 (a large circular part). The diagram illustrates the relative positions and assembly sequence of these parts.

修補件	項次	料號	名稱	規格	數量
	Item	Part No.	Part Name	Spec	Q'ty
	1	22411-E17-000	凸輪板		1
	2	22413-E33-000	重錘滾子		6
	3	22412-E33-000	凸輪板滑鍵		3
	4	22410-E17-000	主滑動槽輪		1
	5	22414-E17-000	離合器軸環		1
	6	173MM.13.01.01	主固定輪組件		1
	7	93240-E13-000	栓槽墊圈		1
	8	173MM.10-03	螺母M14		1
	9	22500-E33-000	傳動皮帶		1
	10	22300-E17-001	副槽輪總成		1
	11	22400-E33-010	主槽輪總成		1
	12	93106-14228-15	盤形墊圈		1
	13	173MM.13.04	間隔管		1
	14	173MM.15.06	螺帽	M12	1
	15	22340-E17-001	離合器外套		1


修補件 項次 料號 名稱 規格

Tranmission

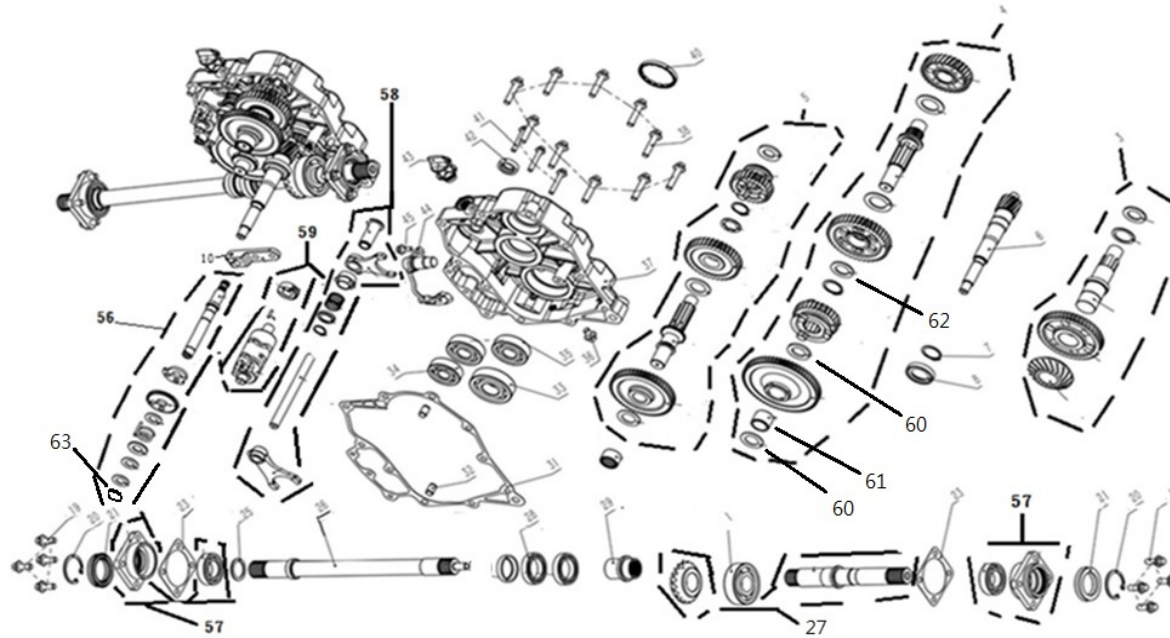

Item	Part No.	Part Name	Spec
1	GB/T276-1994-7	軸承6305	
3	178MN.14.06	傳輪軸組	
4	178MN.14.05	傳動軸組	
5	178MN.14.04	惰輪軸組	
6	178MN.14-01	主驅動軸	
7	GB/T894.1-1986-2	擋圈25	
8	173MM.09.07	油封22×14×5	
10	178MM.14-04	變檔搖臂	
19	GBT16674.1-2004-14	螺栓M6×20	
20	GB893.1-1986-2	擋圈47	
21	OS-2683K	密封圈TC25×40×8	
23	178MN.14-19	軸傳動軸承蓋墊片	
25	178MN.14.06-04	齒輪墊片25.2×33×1	
26	178MN.14-07-03	前輸出軸	
27	178MN.14-07	後輸出軸總成	
28	GB 276-94-1	軸承61906	
29	178MN.14-07-04	前後軸連接花鍵套	
31	178MM.14-12	減速箱蓋墊片	
32	173MM.02-02	定位銷φ10×16	
33	GB/T276-1994-7	軸承6305	
34	GB/T276-1994-9	軸承6303	
35	GB/T276-1994-10	軸承6304	
36	1P39QMB.11-01	減速箱放油螺塞	
37	178MN.14-18	減速箱蓋	
38	173MM.14-13	螺栓M8×40	
40	NAK EC	油封蓋55×7	
41	GBT16674.1-2004-15	螺栓M6×40	
42	OS-2127I	油封TC28×14×7	
43	152FM-1300004	量油尺	
44	3291A-DS001-0000	車速感測器	
45	GBT16674.1-2004-16	螺栓M6×16	
56	178MN.14.03	變速桿總成	
57	178MN.14-15-00	軸傳動軸承蓋總成	
58	175MN.14.01.01	撥叉軸組合	
59	175MN.14.02	換檔鼓組合	
60	95210-AXK1104	止推滾針軸承	
61	95200-202616	滾針軸承	

62	93202-E33-000	變速軸檔位墊圈
63	96200-090026	O型環

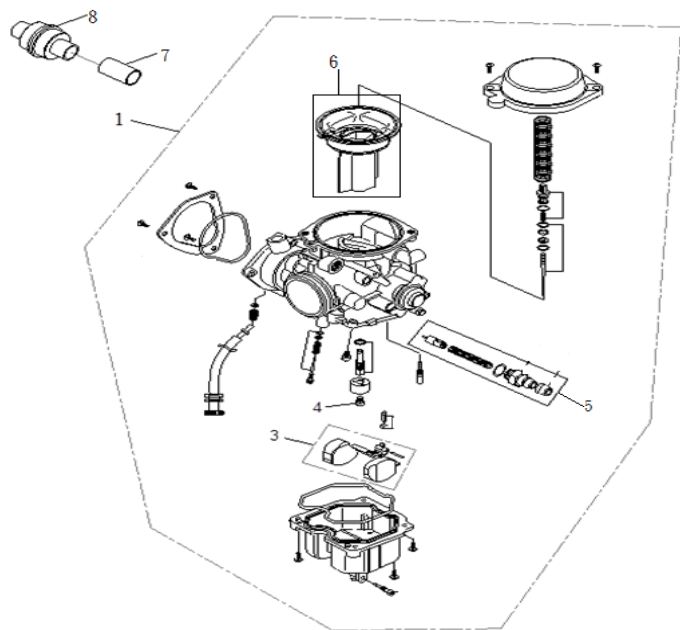

修補件	項次	料號	名稱	規格	數量
	Item	Part No.	Part Name	Spec	Q'ty
	1	16100-E33-001	化油器總成	Carburetor Ass'y	1
	3	16112-E17-000	浮筒組	Float	1
	4	16101-E33-138	主噴油嘴	Main, Jet	#138
	5	16130-E17-000	手動阻風門組		1
	6	16126-E17-000	節流膜片組		1
	7	16310-E10-000	油管	Tube A, Fuel	1
	8	16305-E10-000	真空過濾器	Air Filter, Box	1

[BACK](#)