 
 


E-1
Cylinder,Cylinder Head & Spark Plug

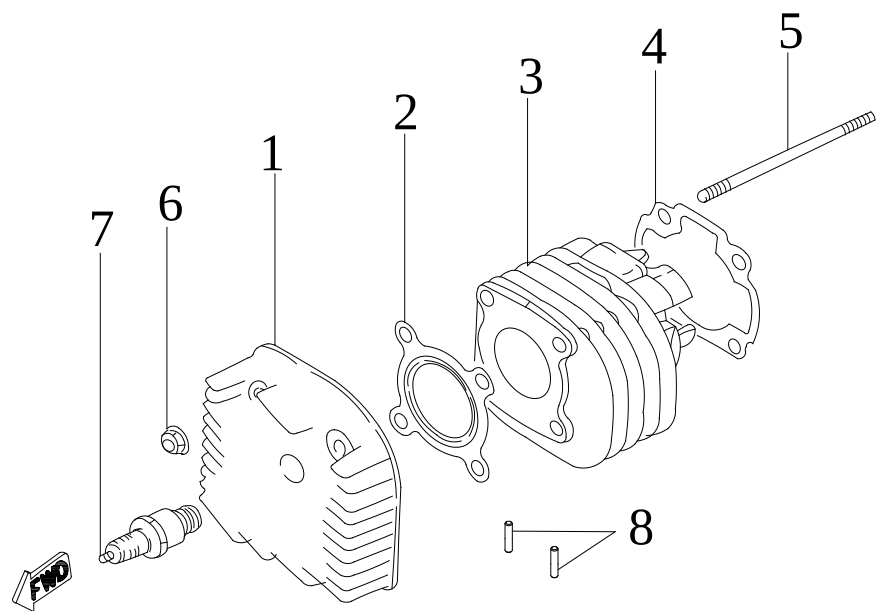


Item	Part No.	
1	12210-E06-010	Head Cover , Cylinder
2	12251-E06-100	Casket , Cylinder Head
3	12100-E06-000	Cylinder
4	12191-E03-102	Gasket, Cylinder
5	91000-07109-1	Bolt, Stud
6	92120-07-10C	Hex.Acorn Washer Face Nut
7	98069-1BR8HSA-R	Plug, Spark
8	91000-06029G	Bolt, Stud

Piston, Crankshaft

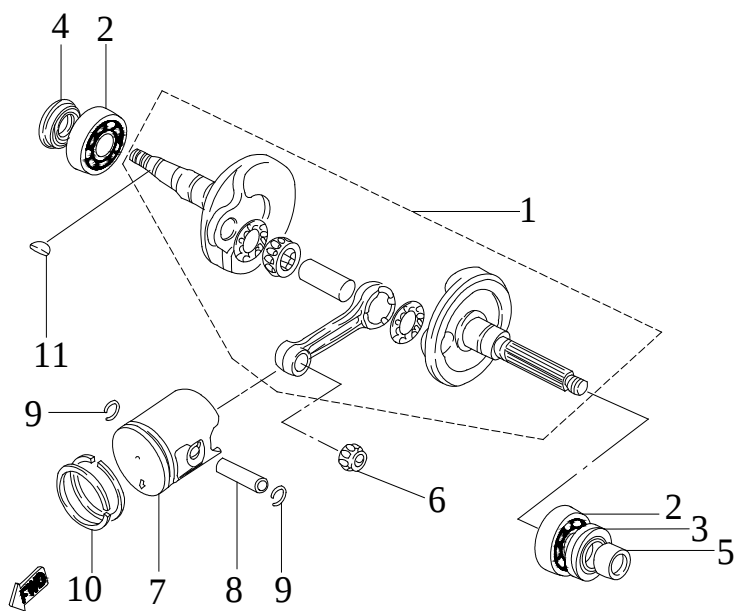


Item	Part No.	
1	13000-E03-000	Crankshaft Ass'y
2	95100-T6204C3	Ball Bearing, Crankshaft
3	96100-204208	Seal,Oil
4	96100-203006	Seal,Oil
5	13200-E03-000	Collar,L Crankcase
6	95200-KBK10	Bearing, Needle
7	13300-E06-000	Piston(std.)
8	13400-E03-100	Pin, Piston
9	13410-E03-100	Clip, Piston Pin
10	13310-E06-000	Rings,Piston(std.)
11	13010-E01-000	Key, Woodruff

 E-3
Fan Shroud

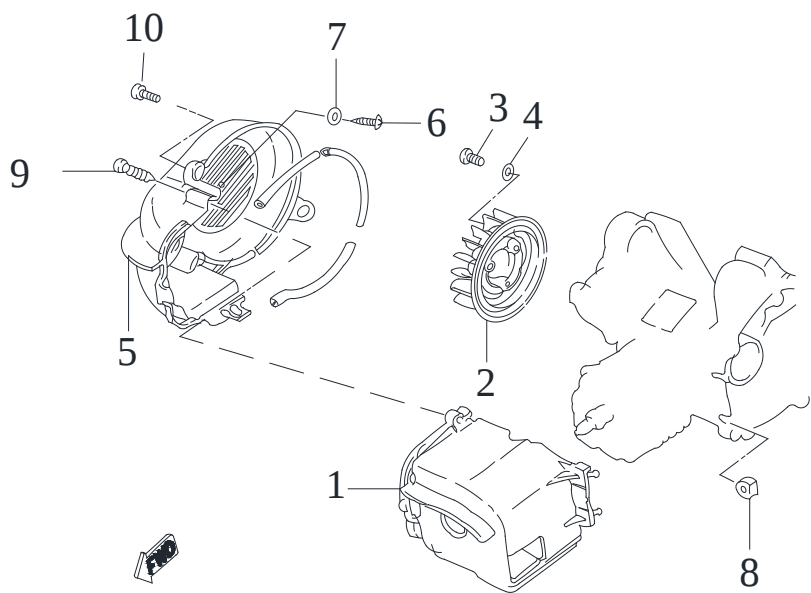

Item	Part No.	
1	17100-E06-000	Air Shroud, Cylinder
2	18100-E04-000	Fan
3	91760-06016-05W-1	Hex. Socket Bolt
4	93100-06013-10W-2	Washer, Plain
5	18210-E04-000	Cover, Fan
6	91825-A01-00A	Philips Screw, Tapping
7	93100-06519-12W-2	Washer, Plain
8	17110-E01-000	Grommet
9	91760-06020-05W-1	Hex. Socket Bolt
10	91825-06040-1	Screw, Tapping

 
E-4
Oil Pump

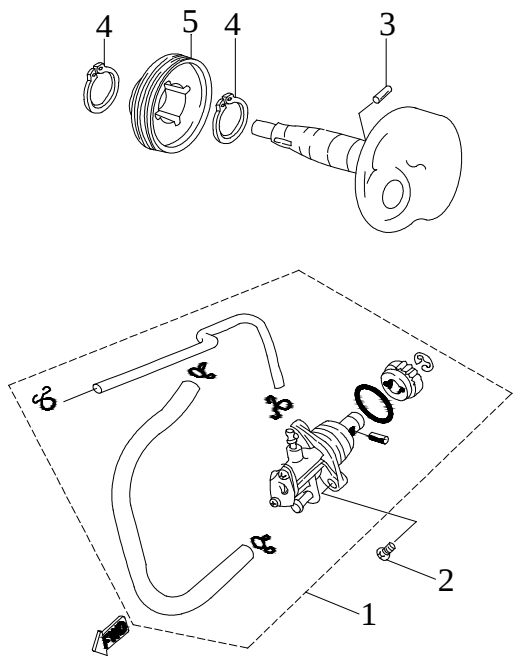

Item	Part No.	
------	----------	--


1	15100-E03-000	Pump, Oil
2	91740-05016W-1	Bolt, Pan, Crosshead
3	94002-030118	Pin
4	93406-STW19A	Circlip
5	15110-E01-000	Drive,Gear, Oil-Pump

 E-5
Air Cleaner, Reed Valve

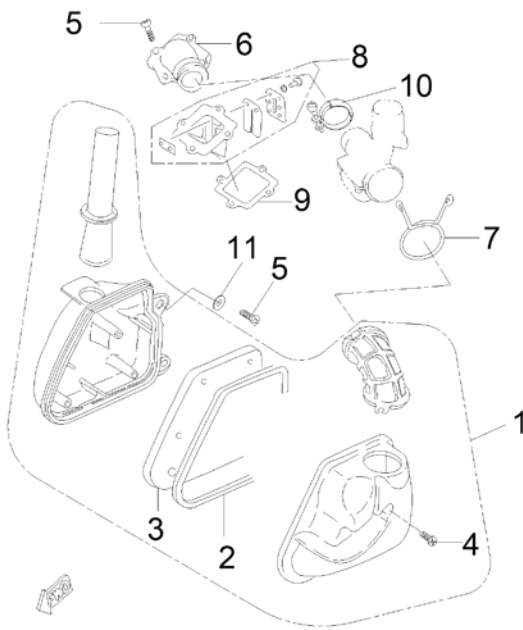


Item	Part No.	
1	17300-E03-100	Air Clenear Ass'y
2	17311-E01-000	Seal
3	17320-E01-000	Filter Element, Air Cleaner
4	17334-E01-000	Screw, Tapping
5	91760-06020-05W-1	Hex. Socket Bolt
6	16410-E01-000	Manifold, Intake
7	17333-E01-100	Clip
8	14710-E03-000	Reed Valve Ass'y
9	14711-E01-100	Gasket, Reed Valve
10	16422-E01-000	Band, Intake Manifold
11	93100-06013-10W-2	Washer , Plate

 E-7
Carburetor

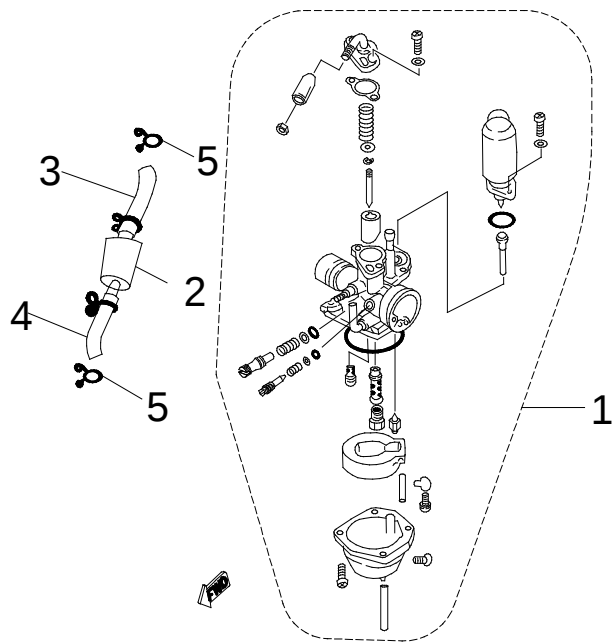


Item	Part No.	
1	16100-E03-010	Carburetor Ass'y
2	16300-E01-000	Filter, Fuel
3	16310-06135A	Tube A , Fuel
4	16310-06070	Tube , Fuel
5	97410-E01-000	Clip, Tube

 E-8
Crankcase

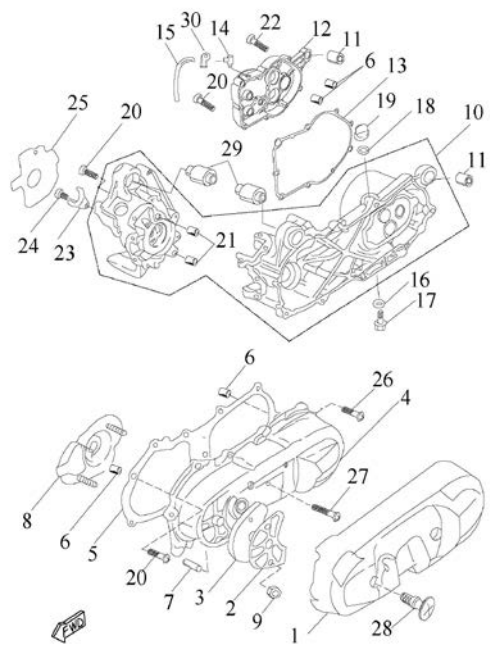


Item	Part No.	
1	11341-E01-000	Protector, L. Crankcase Cover
2	11345-E01-200	Fixed Plate, Filter Element
3	11343-E01-300	Filter Element, L. Crankcase
4	11340-E01-000	Cover, L. Crankcase
5	11395-E01-101	Gasket, L. Crankcase
6	94001-100140	Pin, Dowel
7	11344-E01-000	Shaft
8	11342-E01-200	Guide, Air Filter
9	92120-06-10C-2	Nut,Hex. Flange
10	11000-E03-010	Crankcase
11	93507-082021	Bush
12	11500-E01-000	Gasket ,Transmission Gear Case
13	11420-E01-101	Case Cover ,Reverse Gear
14	11210-E01-000	Breather
15	11211-E01-001	Hose,Breather
16	93101-08015-15-1	Washer, Copper
17	91700-08012-12G	Hex Waser Face Bolt
18	96200-138024	O-Ring
19	11212-E01-000	Plug, Oil
20	91760-06035-05W-1	Hex. Socket Bolt
21	94001-120160	Pin, Dowel
22	91760-06040-05W-1	Hex. Socket Bolt
23	11110-E01-000	Holder
24	91760-06010-05W-1	Hex. Socket Bolt
25	31121-E01-100	Gasket, A.C.G
26	91760-06025-05W-1	Hex. Socket Bolt
27	91760-06065-05W-1	Hex. Socket Bolt
28	11346-E01-000	Bolt, Special
29	93506-123538	Bush
30	97410-E03-000	Clip,Fuel hose

 E-9
Starter

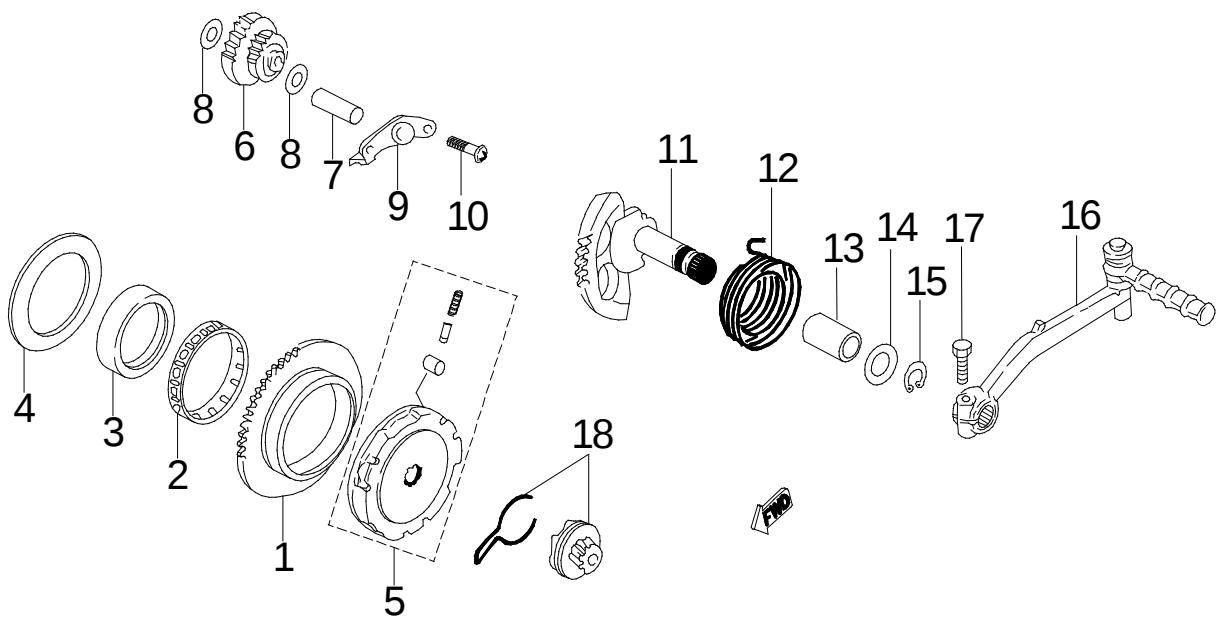


Item	Part No.	
1	22110-E01-200	Wheel, Starter
2	95200-555912	Bearing, Needle
3	11213-E01-100	Boss
4	93100-55076-05B-1	Washer, Plate
5	22100-E03-000	Wheel, Starter
6	22120-E01-000	Idle Gear Ass'y
7	11344-E01-000	Shaft
8	93100-08516-15C-1	Washer, Plate
9	22121-E01-000	Plate, Idle Gear
10	91760-06016-05W-1	Hex. Socket Bolt
11	28211-E01-100	Kick Shaft Ass'y
12	28261-E01-300	Spring, Torsion
13	28251-E01-100	Bush, Kick Shaft
14	93100-15228-10C	Washer, Plate
15	93406-STW15A	Circlip
16	16105-A01-000	Kick Ass'y
17	91700-06025-10C	Hex. Bolt, Flange
18	28221-E01-100	Kick Pinion Ass'y

 E-10
Clutch

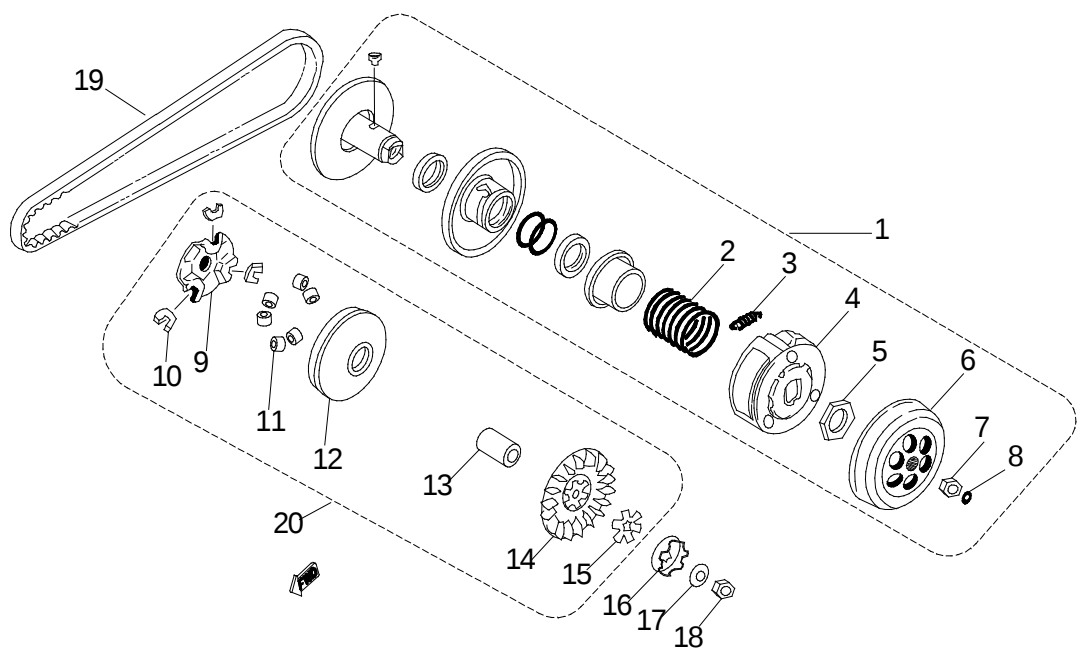


Item	Part No.	
1	22300-E03-200	Secondary Sheave Ass'y
2	22312-E03-000	Spring, Compression
3	22331-E03-000	Spring, Clutch
4	22330-E03-000	Carrier Ass'y, Clutch
5	22332-E01-200	Nut, Clutch
6	22340-E03-000	House. Clutch
7	92111-10-19G	Hex. Acorn Nut
8	96200-125030	O-Ring
9	22411-E03-100	Plate, Cam
10	22412-E01-000	Slider, Cam Plate
11	22413-E01-010	Weight Roller
12	22410-E03-100	Sliding Sheave, Primary
13	22414-E03-100	Collar
14	22420-E03-100	Fixed Sheave, Primary
15	22421-E03-200	Waser, Clam
16	22422-E03-000	Clutch, Oneway
17	93103-10524-26-1	Washer, Conical Spring
18	92110-10-17C	Hex. Acorn Nut
19	22500-E03-000	Belt, Drive
20	22400-E03-200	Sliding Sheave, Ass'y

 E-11
Transmission

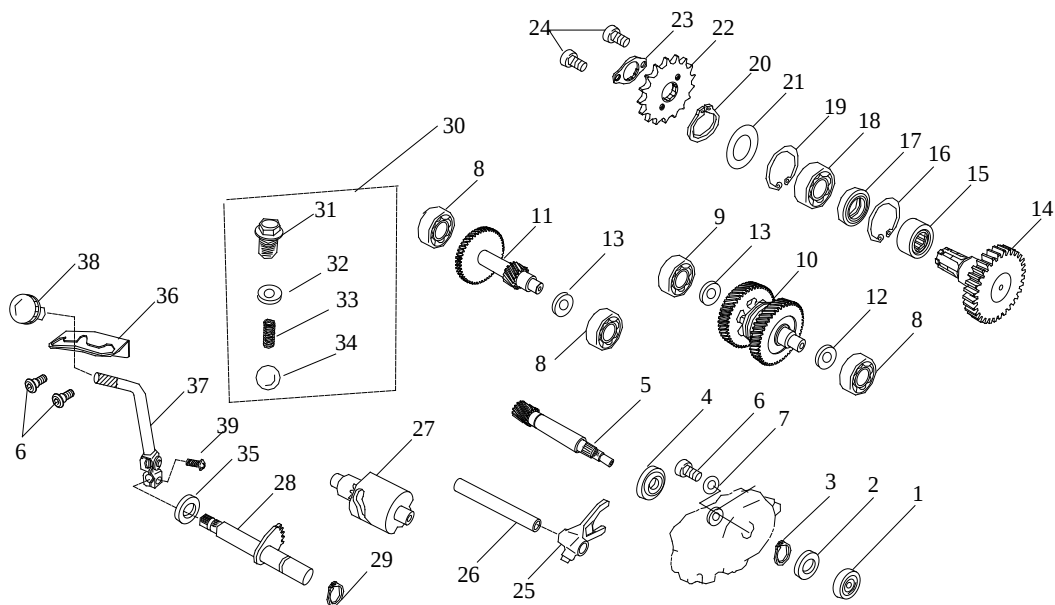


Item	Part No.	
1	95100-638LLU	Bearing, Ball
2	96100-172855	Seal, Oil
3	93406-STW17A	Circlip
4	95100-T6003	Bearing,Ball
5	23610-E01-010	Drive Gear,Primary
6	91760-06010-05W-1	Hex. Socket Bolt
7	93100-06519-12W-2	Waser, Plate
8	95100-T6201	Bearing,Ball
9	95100-T6202	Bearing,Ball
10	23640-E01-000	Main Axle
11	23620-E01-010	Drive Gear,Shift
12	93100-15522-10B	Washer , Plate
13	93100-12018-10B	Washer , Plate
14	23650-E01-000	Gear,Driven
15	95200-HMK2515-3	Bearing,Needle
16	93405-IRTW32A	Circlip
17	96100-253506	Seal, Oil
18	95100-6004LLU	Bearing, Ball

 E-11-1
Transmission

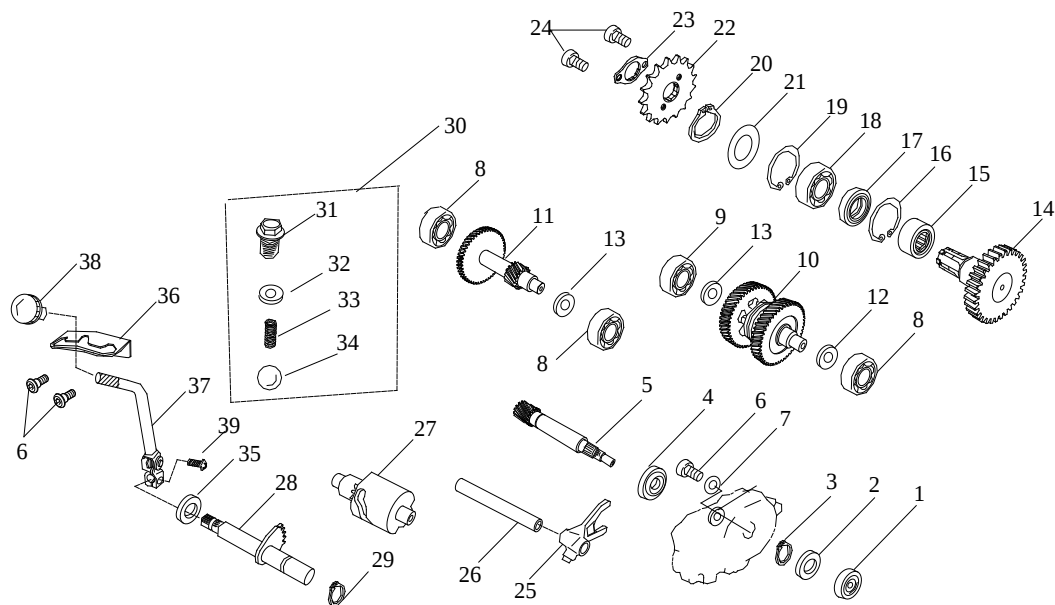


Item	Part No.	
19	93405-RTW42A	Circlip
20	93406-STW19A	Circlip
21	93100-20028-10B	Washer,Plate
22	23810-E01-000	Sprocket,Prive
23	23900-E01-000	Safety Clip
24	91700-06012-10G	Hex. Bolt, Flange
25	41000-E01-000	Shift ,Fork
26	41020-E01-100	Gear Shift Fork Guide Shaft
27	41030-E01-000	Gear Shift Drum
28	41040-E01-000	Gear Shift Fork Guide Shaft
29	93406-STW14A	Circlip
30	41050-E01-000	Shift Position Fix Ass'y
31	41051-E01-100	Hex
32	41054-E01-100	Tlat Washer Aluminium
33	41052-E01-100	Spring
34	41053-E01-100	Shift Ball
35	96100-14287	Seal,Oil
36	41060-E01-101	Bracket ,Shift
37	41070-E01-000	Shift Stick
38	41080-A10-000	Knob, Shift Stick
39	91700-06020-10C-1	Hex.Washer Face Bolt

 E-12
Generator

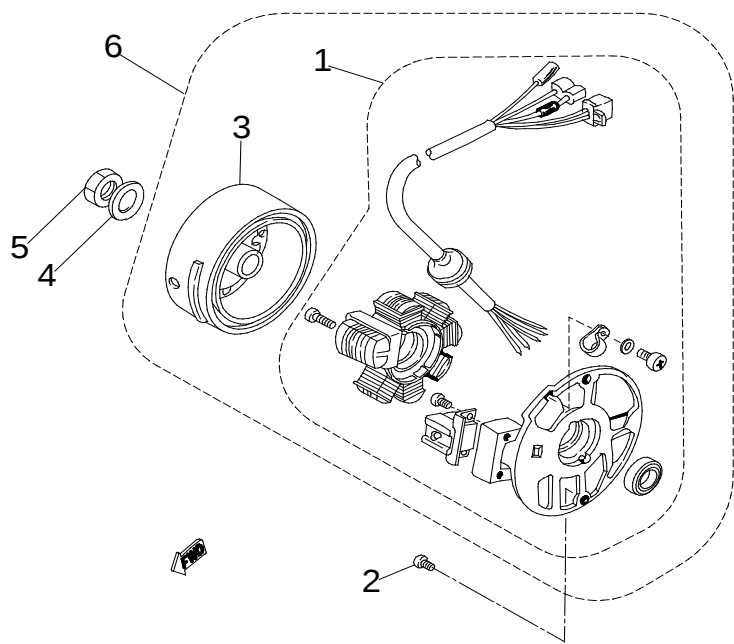


Item	Part No.	
1	31120-E03-100	Base Ass'y, Generator
2	91760-06016-05W-1	Hex. Socket Bolt
3	31100-E03-100	Wheel, Fly
4	93100-10022-20C-1	Washer, Plate
5	92110-10-17C	Hex. Acorn Nut
6	31000-E03-300	Generator Ass'y

 E-13
Start Motor

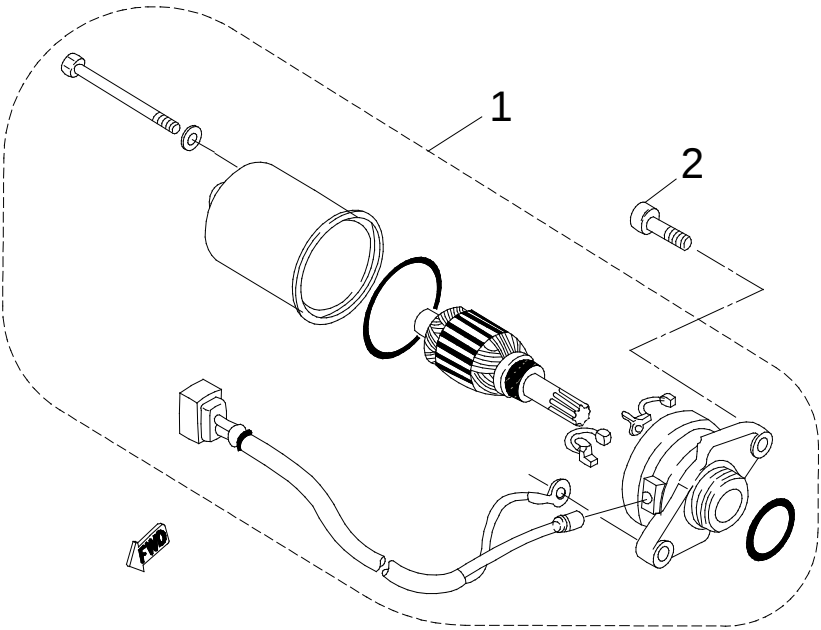


Item	Part No.	
1	31200-E01-300	Starting Motor Ass'y
2	91760-06020-05W-1	Hex. Socket Bolt

 F-1
Exhaust Pipe

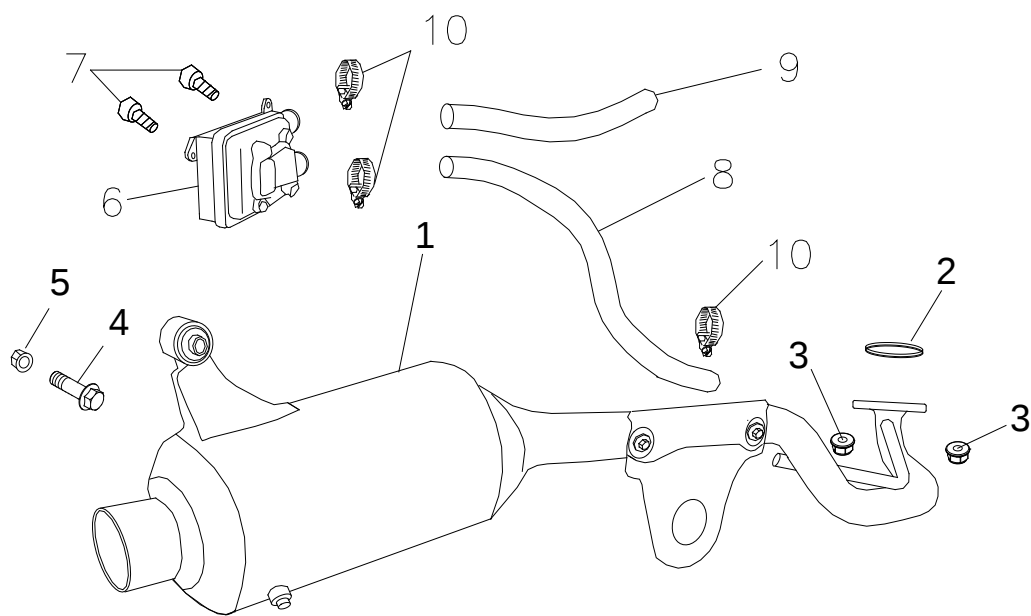


Item	Part No.	
1	12160-A01-150	Exhaust Pipe
2	12161-A01-000	Washer, Muffler
3	92130-06S-10G	Nut, Insert Lock
4	91700-10040-14G	Bolt , Flange
5	92130-10S-14W	Nut, Insert Lock
6	12166-A01-000	Reed Valve Ass'y, Air
7	91750-06020-10G-1	Hex. Bolt,Flange, Washer
8	12168-A01-110	Hose, Air
9	12168-A01-020	Hose, Air
10	97412-A01-010	Clip(MinHC-1 7)

 F-2
Frame

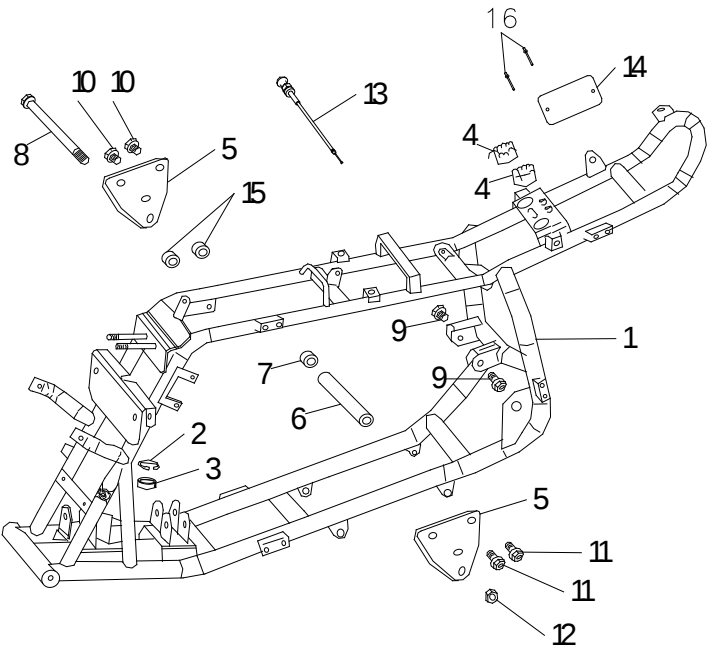


Item	Part No.	
1	71000-A02-121-SI	Chassis
2	93405-IRTW32A	Circlip
3	95100-B6002 2RS	Bearing
4	93501-A01-000	Coushion, Seat
5	71205-A01-000	Engine Holder Seat
6	93305-A01-100	Collar (andoised)
7	93310-A01-000	Collar(andoised)
8	91700-12220-14G	Blot Flange
9	91710-08035-12G	Hex Washer Face Bolt
10	91700-08020-12G	Hex Washer Face Bolt
11	91700-08012-12G	Hex Washer Face Bolt
12	92130-12S-17G	Nut, Insert Lock
13	31220-A01-000	Cable, Manual Choke
14	71237-E03-000	id ,plate
15	93300-08020-07-1	Spacer
16	91835-A01-000	Stud, Warning Plate

 F-3
Awing Arm , Footrest

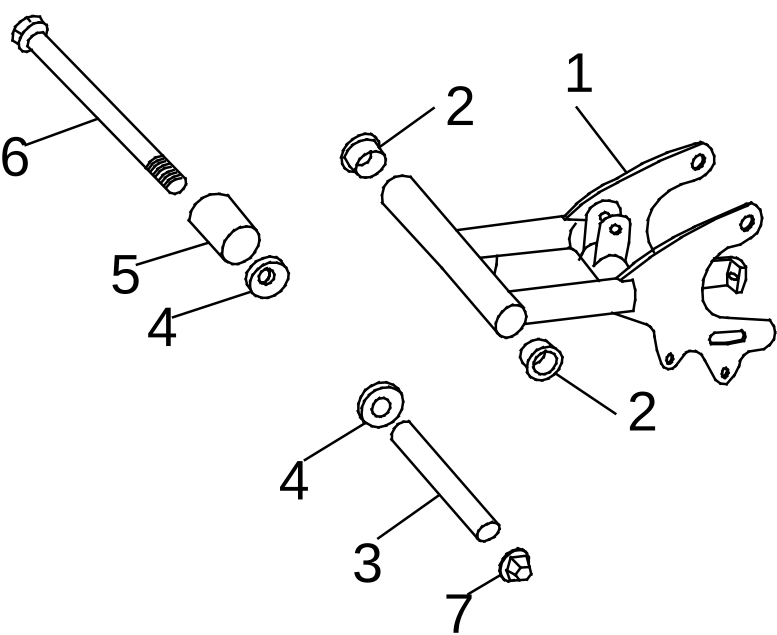


Item	Part No.	
1	82105-A01-111	Fork, Rear
2	95305-A01-000	Bushing Contain Oil
3	93315-A01-000	Spacer Tube, Rear-fork
4	93609-A01-100	Seal cover,swing Arm
5	93500-A01-000	Rubber Sleeve
6	91700-14290-19G-1	Bolt, Flange
7	92130-14S-19G	Nut, Insert Lock

 F-4
Bumper 、A-Arm

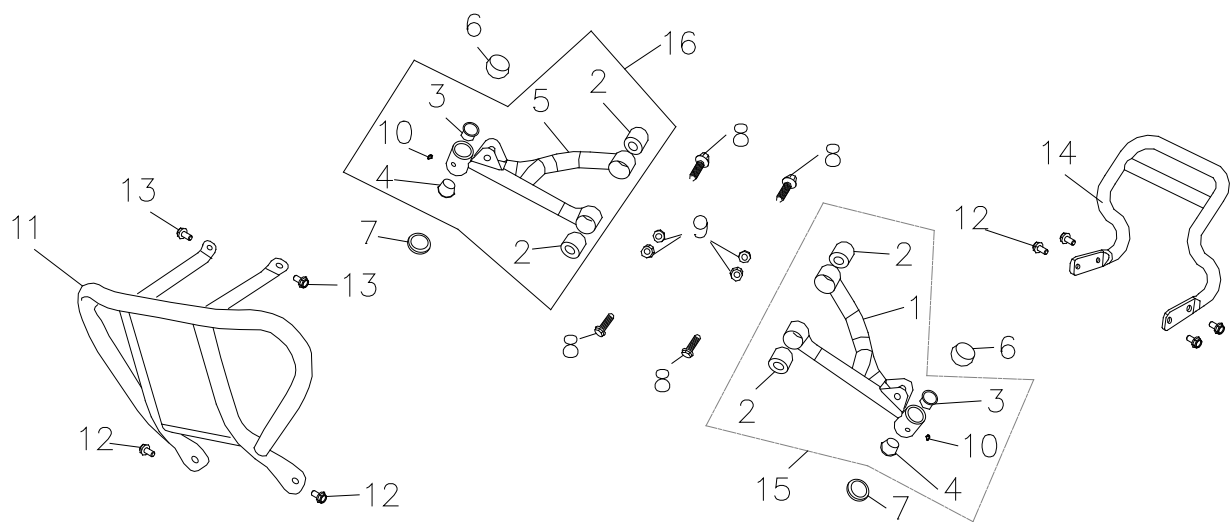


Item	Part No.	
1	81105-A02-200-SI	A Arm, Left
2	93505-A01-200	Bush
3	95310-A01-100	Bush, Contion Oil, Top
4	95315-A01-100	Bush, Contion oil, Bottom
5	81110-A02-200-SI	A Arm, Right
6	93605-A01-000	Waterproof Rubber
7	93610-A01-000	Dustproof Rubber
8	91700-10048-14G	Bolt, Flange
9	92130-10S-14W	Nut, Insert Lock
10	91805-A01-000	Grease Valve
11	71211-A01-250-SI	Front Bumper
12	91700-08012-12G	Hex Waser Face Bolt
13	91750-06014-10G-1	Bolt ,Flange
14	71235-A01-120-SI	Rear Hand Grip
15	81000-A02-200-SI	A Arm Ass'y, Left
16	81010-A02-200-SI	A Arm Ass'y, Right

 F-5
Fuel Tank, Oil Tank

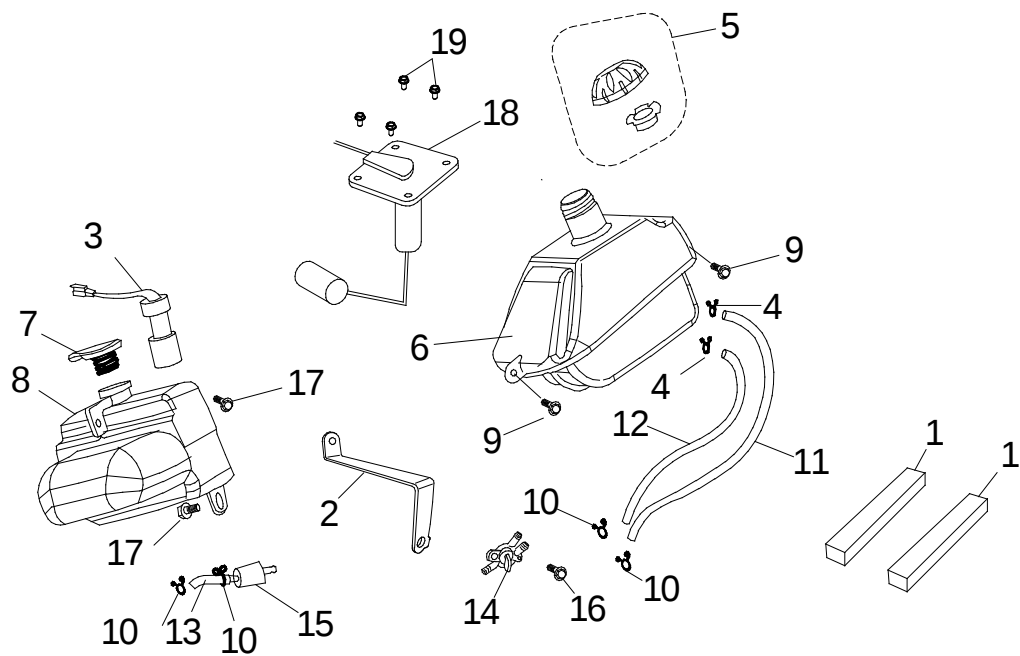


Item	Part No.	
1	12110-A02-100	Sponage
2	12220-A01-001	Bracket, Support
3	12210-A01-000	Gauge, Oil Level
4	97411-106-08	Clip
5	12150-A01-010	Cap Assembly, Fuel tank
6	12100-A01-010	Tank,Fuel
7	12205-A01-001	Cap, Oil Tank
8	12200-A01-001	Tank, Oil
9	91750-06014-10G-1	Bolt ,Flange
10	97410-E01-000	Clip, Tube
11	12310-A01-002	Tube A , Fuel
12	12311-A01-002	Tube B , Fuel
13	12317-A01-111	Tube,Oil
14	12105-A01-000	Valve, Fuel
15	12215-A01-000	Oil Filter
16	91700-06012-10G	Hex. Bolt, Flange
17	91821-A01-000	Bolt, Hex Ladder(Short)
18	12115-A01-000	Gauge,Fuel Tank
19	91710-05010-08B	Bolt, Hex. Washer Plate

 Shock Absorber 、 Lamp

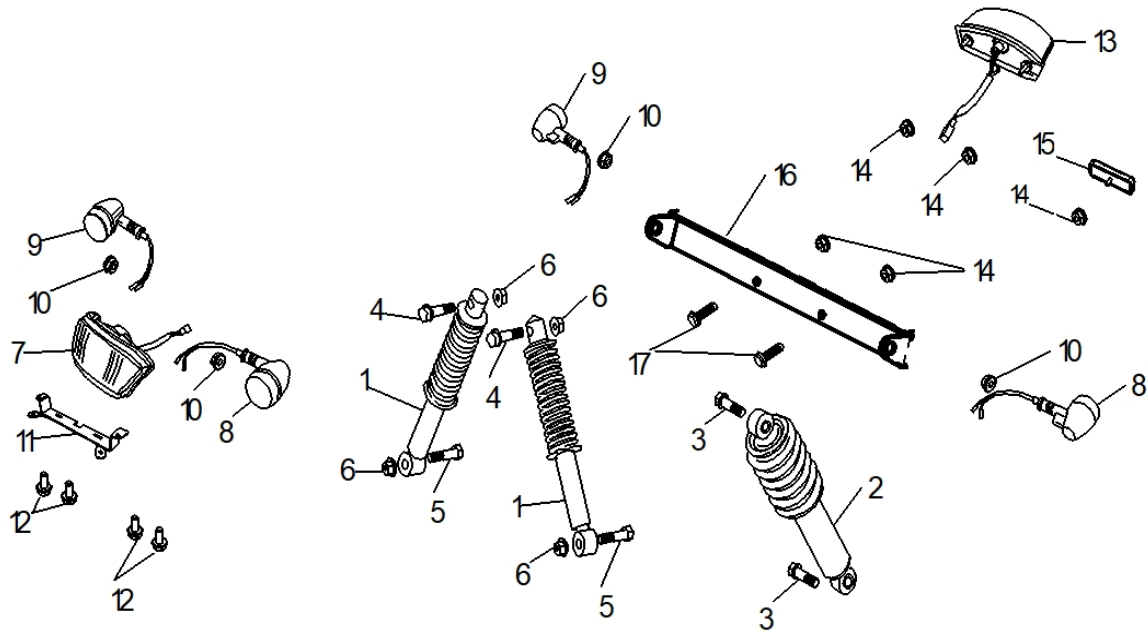


Item	Part No.	
1	81200-A01-10A	Shock Absorber, Front
2	82200-A01-121	Shock Absorber , Rear
3	91710-10038-14G	Hex. Bolt, Flange
4	91700-10040-14G	Hex. Bolt, Flange
5	91770-10038-14G	Hex. Blot
6	92130-10S-14W	Nut, Insert Lock
7	62205-A01-010	Head Lamp Comp
8	62230-A01-000	Singal Light, L. Rear
9	62225-A01-000	Signal Light, R. Rear
10	92120-10-14G	Nut, Flange
11	62206-A01-000	Head Lamp Bracket
12	91825-04012-1	Philips Screw, Tapping
13	62210-A01-000	Tail Light Comp
14	92130-06S-10G	Nut, Insert Lock
15	62240-A01-000	Reflector, Rear
16	83117-A01-000	Clip, Signal Light
17	91700-06016-10G	Hex. Bolt, Flange

 F-7
Front Tire

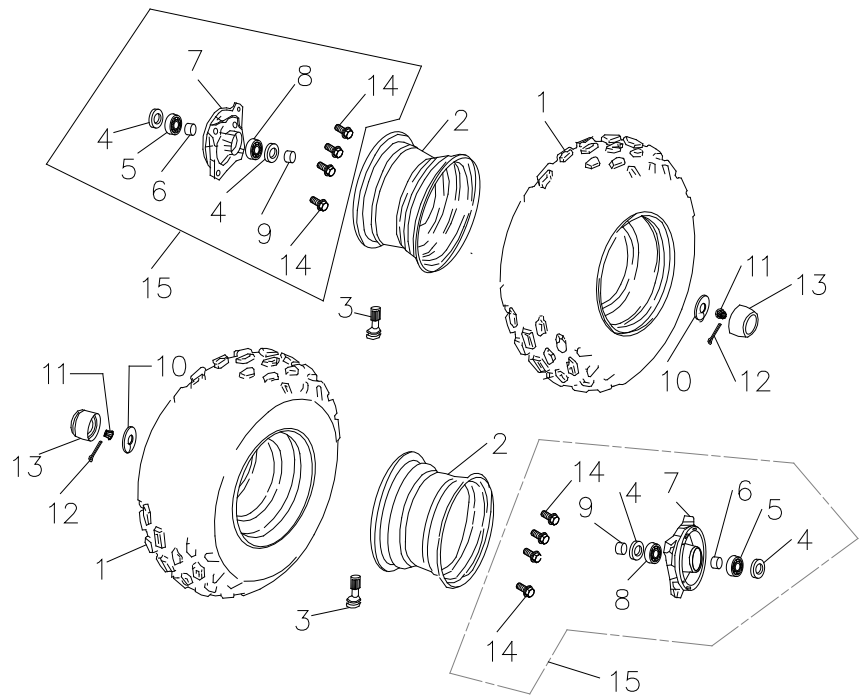

Item	Part No.	
1	24105-A02-000	Tire(KENDA K546F) 19X7-8
2	24205-A01-300	Rim 8x5.5
3	24106-A01-000	Valve, Tire
4	96100-223507A-1	Seal, Oil
5	95100-B6003Z	Bearing
6	93325-A01-300	Spacer, Inner
7	31302-A01-000	Drum Brake, Front
8	95100-B6002Z	Bearing
9	93320-A01-200	Spacer, Outer
10	93100-12540-45G	Washer, Plate
11	92140-12-17G	Nut, Insert Lock
12	94000-03032	Cotter pin
13	93615-A01-000	Cap, Rubber
14	91710-10020-14W	Hex. Bolt, Flange
15	31301-A01-000	Drum Brake Ass'y, Front

 
F-8
Rear Tire

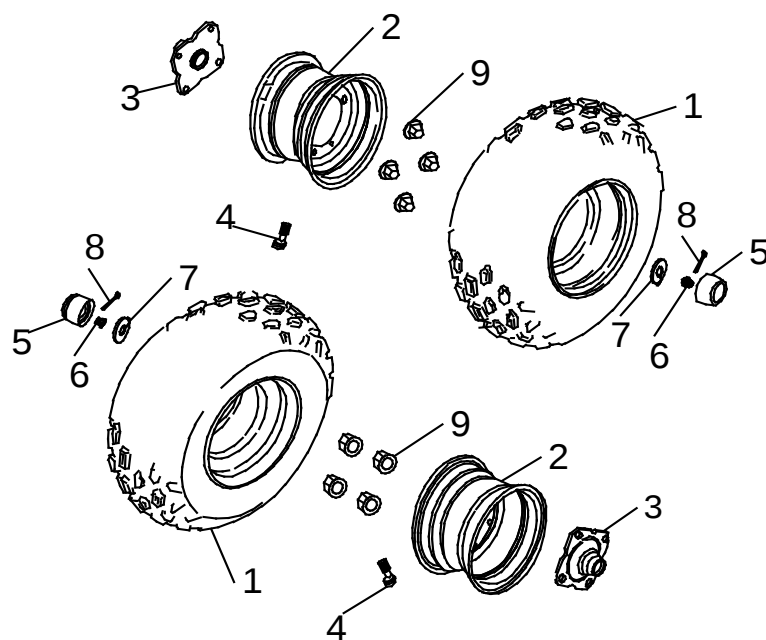


Item	Part No.	
1	24105-A02-010	Tire(KENDA K547F) 18x9.5-8
2	24206-A01-400	Rim 8x7
3	23105-A01-001	Fixed bracket , Rim , Rear
4	24106-A01-000	Valve, Tire
5	93615-A01-000	Cap, Rubber
6	92140-14-19G	Nut, Insert Lock
7	93100-14540-45G	Washer, Plate
8	94000-03032	Cotter pin
9	92130-10S-14W	Nut, Insert Lock

F-9

 Drum Brake,Front

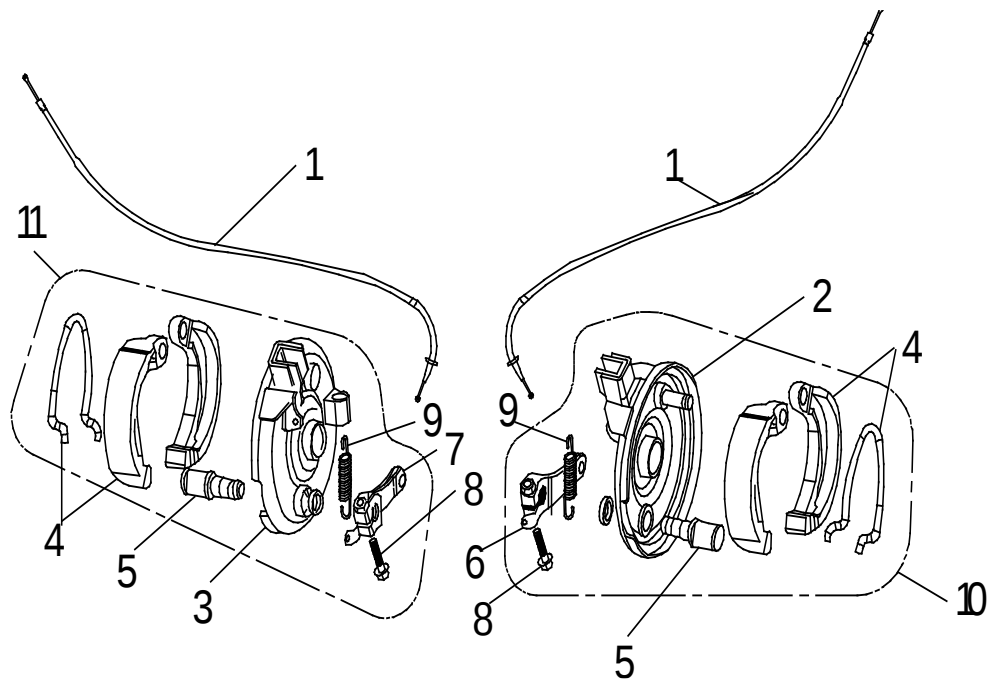


Item	Part No.	
1	31205-A02-002	Cable , Front Brake
2	31306-A01-00A	Panel Comp , Front L,Brake
3	31311-A01-00A	Panel Comp , Front R,Brake
4	31315-A01-001	Shoe, Front Drum Brake
5	31320-A01-000	Cam Shaft, Front Brake
6	31325-A01-010	Arm, Front L. Brake
7	31330-A01-010	Arm, Front R. Brake
8	91700-05024-08C	Bolt, Hex. Washer Plate
9	97205-A01-000	Return Spring, Front Brake
10	31305-A01-012	Panel Comp Ass'y , Front L. Br
11	31310-A01-012	Panel Comp Ass'y , Front R. Br

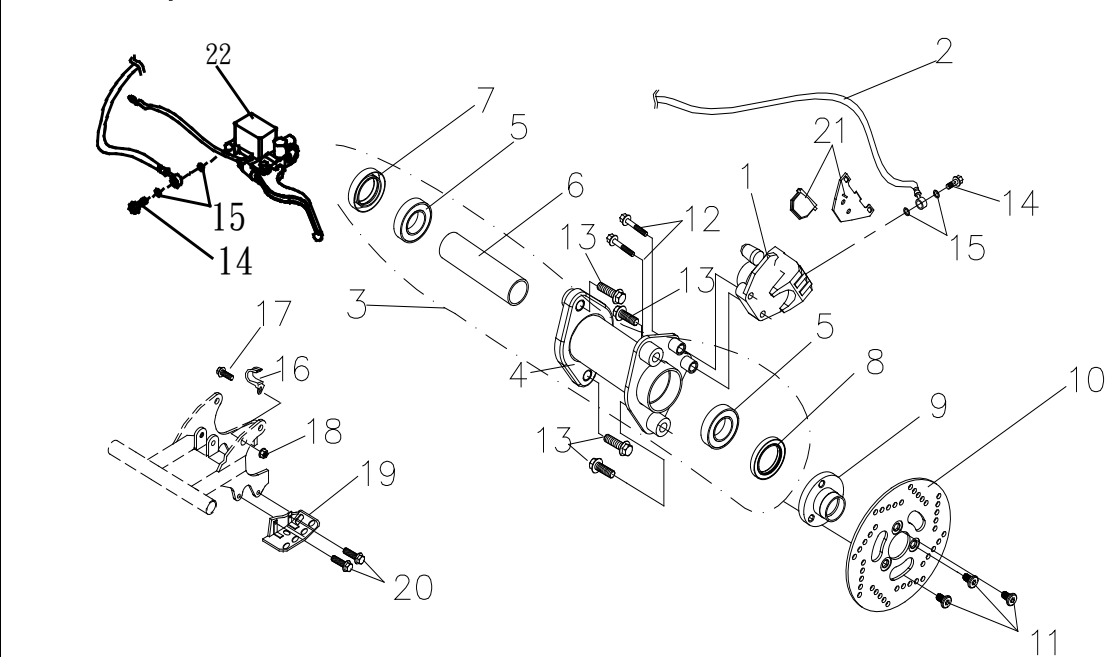 F-10**Disc Brake System**

Item	Part No.	
1	31360-A01-000	Rear Disc Caliper
2	31225-A02-001	Hose, Rear Disk Brake
3	31300-A02-000	Rear Axle Bearing Carrier
4	23215-A01-000	Rear Holder Disk
5	95100-T6006ZZ	Bearing
6	93330-A01-00A	Spacer
7	96100-355511A	Oil Seal
8	96100-405507	Oil Seal
9	31355-A01-020	Holder Disk
10	31120-A01-000	Rear Brake Disc
11	91760-10014-08G	Hex Socket Bolt
12	91710-08038-12G	Hex Washer Face Bolt
13	91710-12028-17G	Hex Washer Face Bolt
14	91830-A01-000	Nut, Brake Hose
15	93101-A01-000	Washer, Copper
16	83115-A01-000	Clip, Brake Hose
17	91700-06016-10G	Hex Washer Face Bolt
18	92130-06S-10G	Nut, Insert Lock
19	71220-A01-100	Rear Brake Guard
20	91700-08012-12G	Hex Waser Face Bolt
21	31337-A01-000	Brake Pad , Disk Brake
22	31405-A01-000	Lever Ass'y,Left


F-11

 Handle bar,Lever

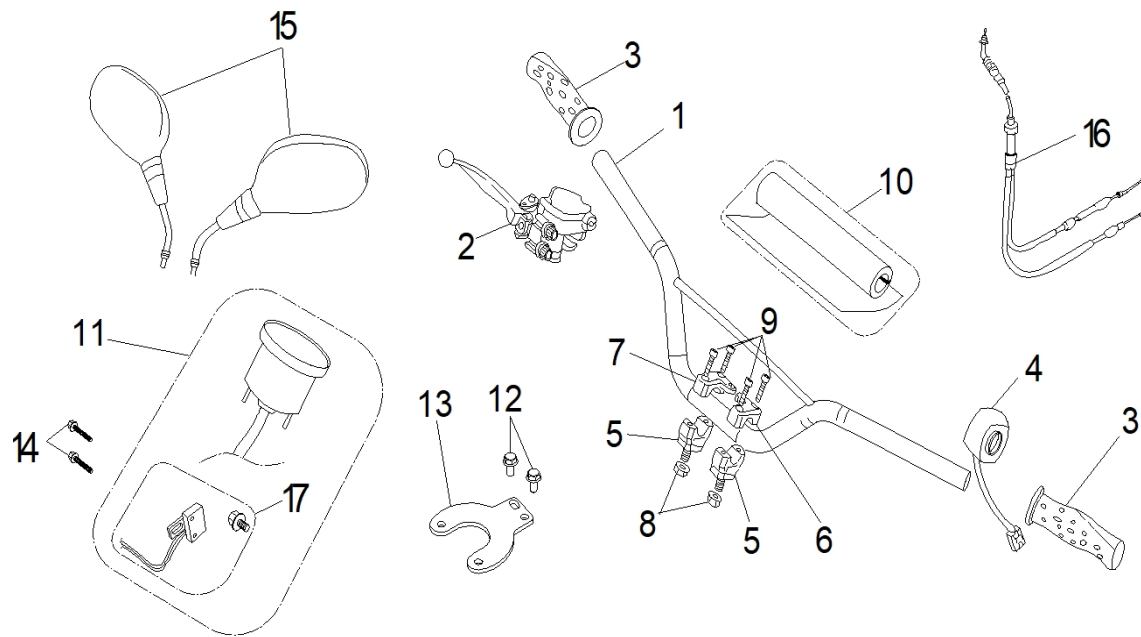


Item	Part No.	
1	51100-A01-050-BK	Handleber
2	31450-A01-011	Lever Ass'y,Right
3	51105-A01-000	Grip, Handle(L)
4	61101-A01-0A0	Handle Switch Ass'y, L.
5	52105-A01-000	Bottom Clamp, Handlebar
6	52110-A01-000	Top Clamp, L. Handlebar
7	52115-A01-000	Top Clamp, R. Handlebar
8	92130-10S-14W	Nut, Insert Lock
9	91760-06025-05G-1	Screw, Hex. Socket
10	51110-A01-010	Pad, Handlebar
11	63300-A01-110	Speedometer
12	91760-06012-05G	Hex. Screw, Socket
13	83120-A01-110	Bracket Speedometer
14	91740-03008W	Bolt,Pan Phillips
15	51115-A01-101	Rear Mirror(pair)
16	31215-A02-000	Cable, Throttle
17	63302-A01-110	Sensor, Speedometer

 F-12
Rear Axle, Sprocket

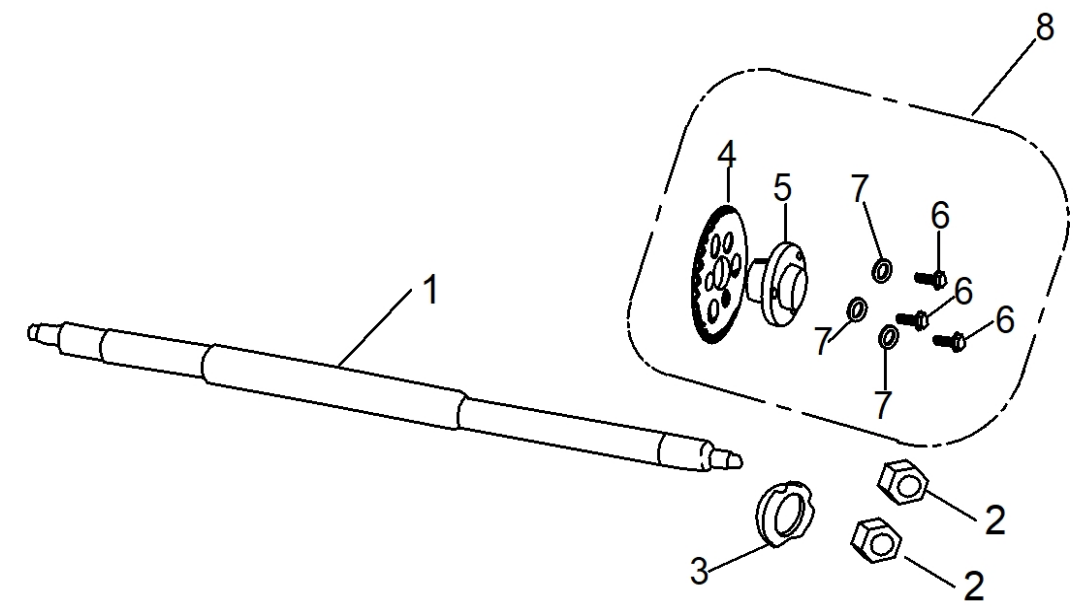


Item	Part No.	
1	23205-A01-032	Wheel Axle,Rear
2	92110-28-36B	Hex. Acorm Nut
3	93110-30038-10-1	Washer,Wave
4	23305-A01-01B	Sprocket
5	23310-A01-000	Sprocket Holder, Driven
6	91810-A01-000	Bolt, Hex. Washer Plate
7	93103-A01-000	Spring Washer
8	23300-A01-01B	Sprocket Ass'y(rear,428-28T)

 F-13
Chain,Guard

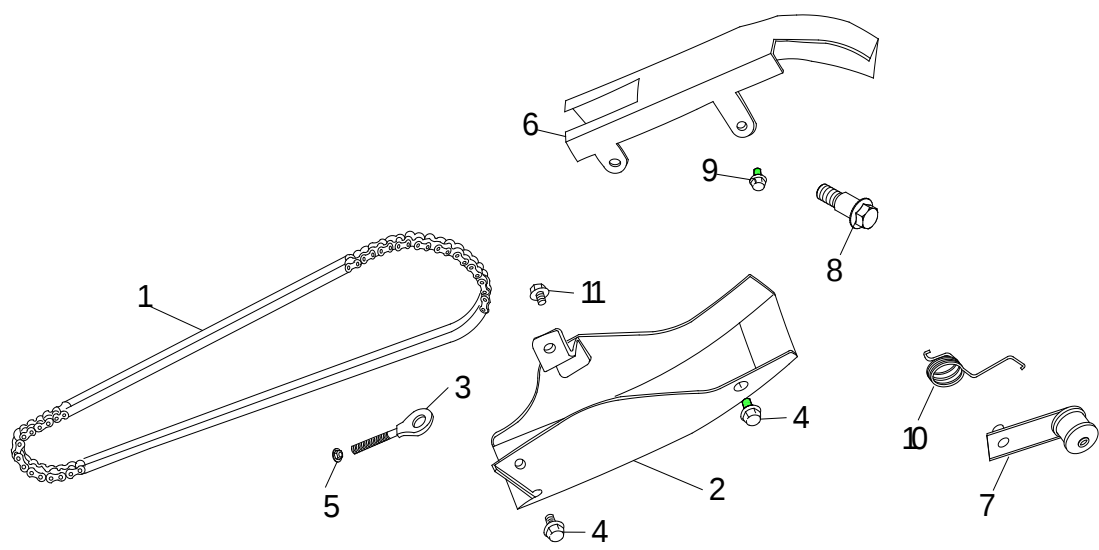


Item	Part No.	
1	23315-NP428H-082	Chain
2	71225-A01-201	Guard, Bottom, Chain
3	23321-A01-010	Adjuster, Chain
4	91700-08012-12G	Hex Waser Face Bolt
5	92130-08S-14G	Nut, Insert Lock
6	71230-A01-300	Guard, Top, Chain
7	23320-A01-003	Bracket, Chain
8	919101-120295-12-1	Hex Waser Ladder Bolt
9	91700-06012-10G	Hex Waser Face Bolt
10	97211-A01-000	Return Spring
11	91700-08020-12G	Hex Waser Face Bolt

 Steering,Shaft ,Link

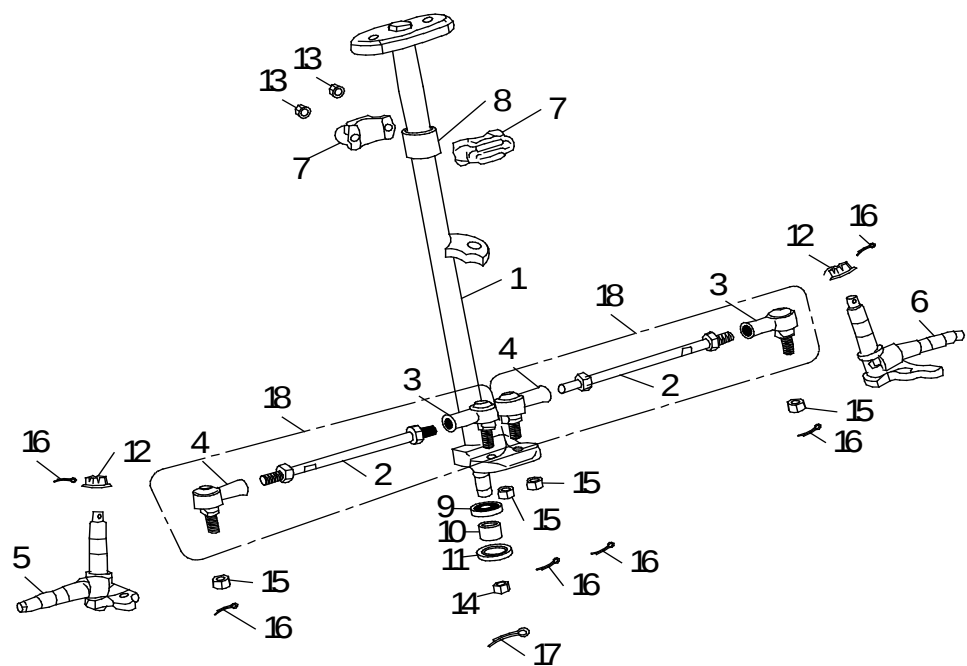


Item	Part No.	
1	52205-A02-100	Steering Shaft Assembly
2	52305-A01-100	Pull Rod
3	52310-A01-100	Ball Joint, Left Thread
4	52315-A01-100	Ball Joint, Right Thread
5	52320-A01-000	Knuckle, L.
6	52325-A01-000	Knuckle, R.
7	52120-A01-000	Shaft Holder, Steering
8	93510-A01-000	Bush, PU
9	96100-183207A	Seal , Oil
10	93325-A01-200	Spacer, Inner
11	96100-223507A	Seal, Oil
12	92141-10-14G	Cross Thread Nut
13	92130-08S-14G	Nut, Insert Lock
14	92130-14S-19G	Nut, Insert Lock
15	92130-10S-14W	Nut, Insert Lock
16	94000-02525	Cotter pin
17	94000-03032	Cotter pin
18	52300-A02-100	Link Ass'y

 F-15
Electronics

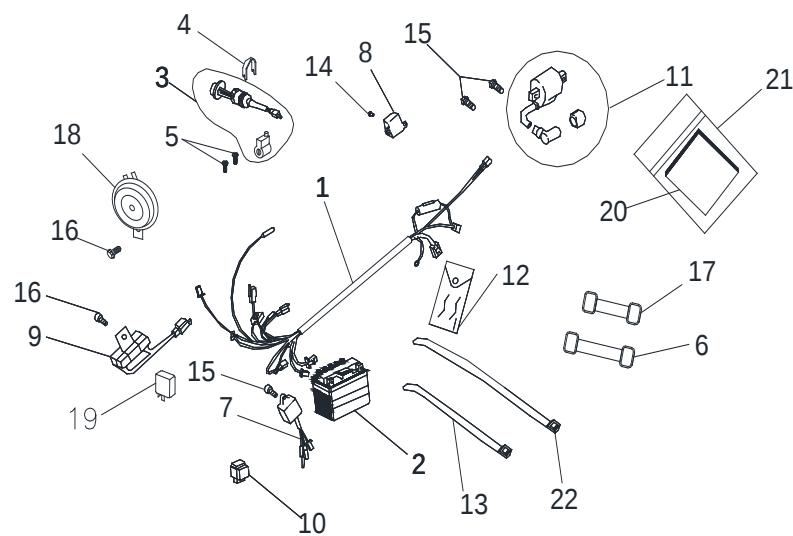


Item	Part No.	
1	63100-A01-243	Main Wire Ass'y
2	63205-A01-00A	Battery
3	61106-A01-001	Main Switch(with Handle Lock)
4	61107-A01-000	Clip, Main Switch
5	91732-06015G	Bolt
6	83110-A01-000	Rubber Band,Tool Bag
7	61115-A01-000	C.D.I Unit
8	61120-A01-000	Rectifier & Regulator
9	61125-A01-100	Resistor
10	61130-A01-100	Starter Relay
11	61109-A01-000	Ignition Coil
12	72105-A01-000	Tool Bag
13	93705-TSL48200YB	Strap
14	91740-05012G	Bolt, Pan Phillips
15	91700-06016-10G	Hex Washer Face Bolt
16	91700-06012-10G	Hex. Bolt, Flange
17	83105-A01-010	Rubber Band, Battery
18	61145-A01-100	Horn
19	61150-A01-000	Blink Relay
20	72117-A01-010	Owner manual
21	97810-A01-000	
22	93705-CV300SBK	Strap

 F-16-1
Seat, Fender

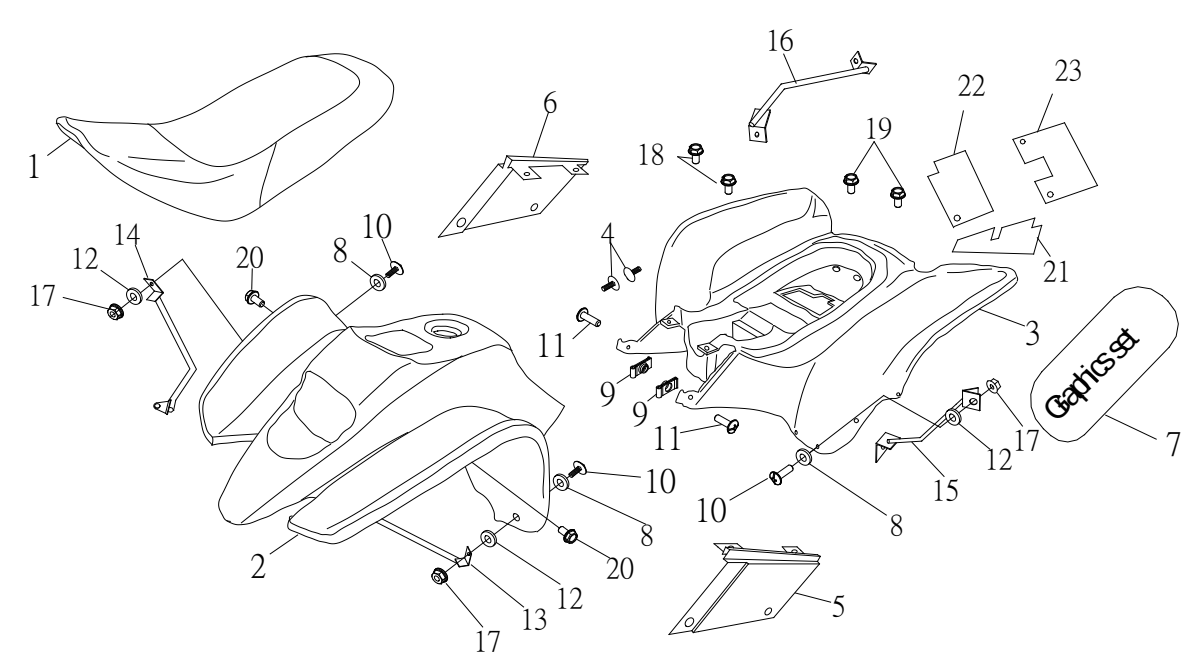


Item	Part No.	
1	71305-A02-000	Seat
2	72205-A01-00F	Fender,Front(green)
3	72210-A01-00F	Febder,Rear(green)
4	93611-A01-030	Plastic Plug
5	72230-A02-00F	Side Panel, Left
6	72225-A02-00F	Side Panel, Right
7	72115-A01-050	Sticker (streak)
8	93104-06014-08	Washer, Nylon
9	92210-A01-100	U Plate Nut
10	91731-06018S	Hex Socket Bolt
11	91731-06015S-1	Hex Socket Bolt

 F-16-2
Seat,Fender

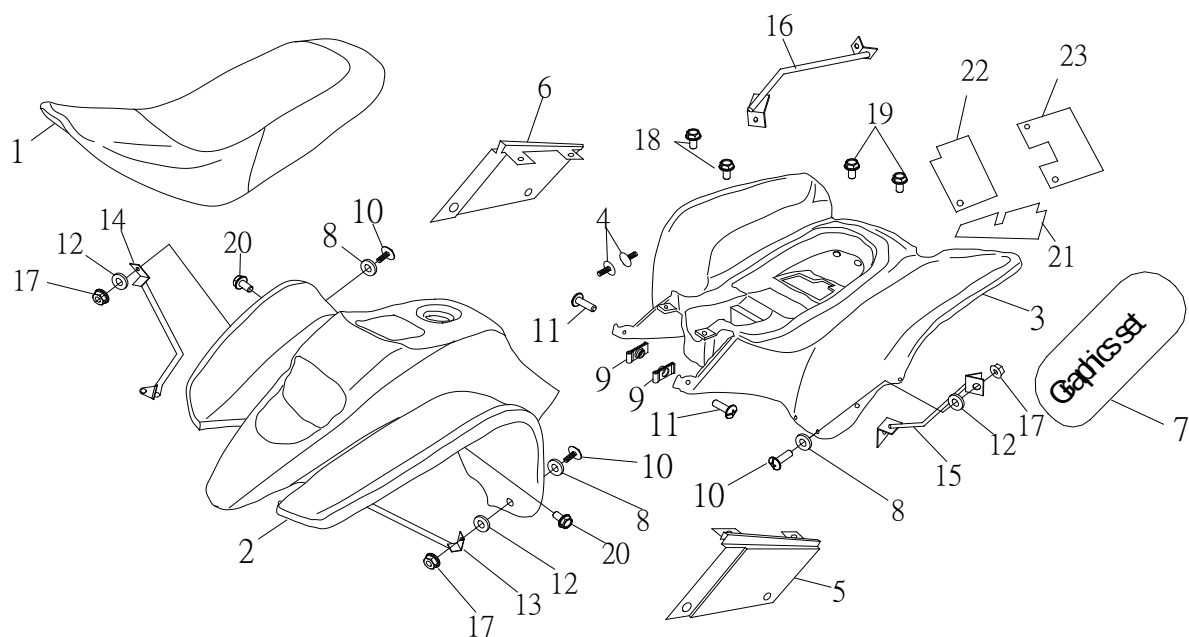

Item	Part No.	
12	93502-A01-000	Rubber Mate
13	71100-A02-100	Support, Front Fender L
14	71101-A02-100	Support ,Front Fender R
15	71102-A02-100	Support, Rear Fender L
16	71103-A02-100	Support Rear Fender R
17	92130-06S-10G	Nut, Insert Lock
18	91821-A01-000	Bolt, Hex Ladder(Short)
19	91820-A01-000	Bolt, Hex Ladder(Long)
20	91750-06014-10G	Bolt ,Flange
21	72120-A01-000	Heat Cushion(Side)
22	72125-A01-000	Heat Cushion(Front)
23	72130-A01-000	Heat Cushion(Rear)

 F-17
Nerfbar

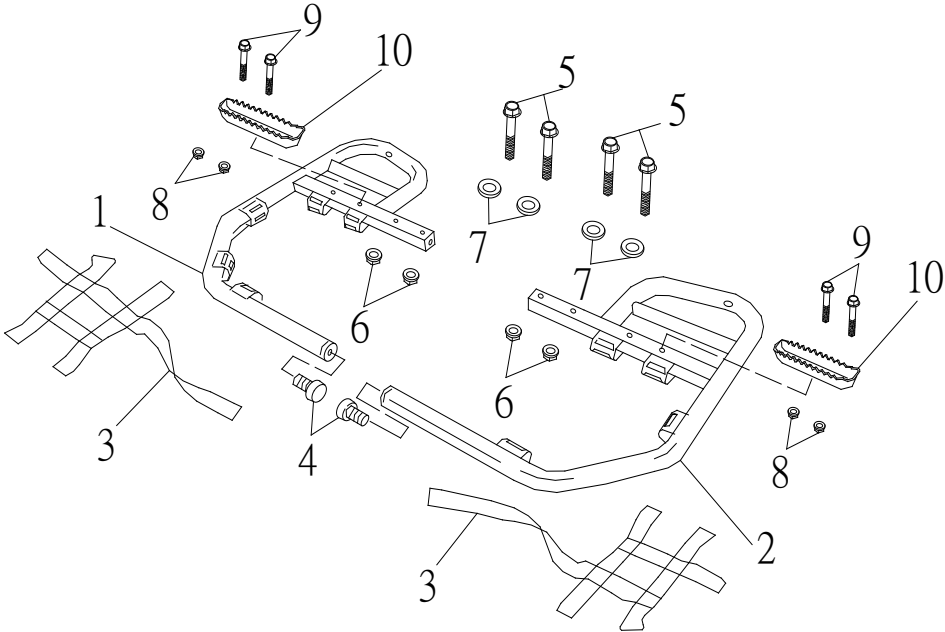

Item	Part No.	
1	72305-A02-A20	Nerfbar , Right(aluminum)
2	72310-A02-A20	Nerfbar , Left(aluminum)
3	72311-A02-000	Nylon net,Nerfbar
4	91700-08016-12G	Hex Waser Face Bolt
5	91700-08045-12G	Bolt, Flange
6	92130-08S-14G	Nut, Insert Lock
7	93100-10032-30G-1	Washer, Plate
8	92130-06S-10G	Nut, Insert Lock
9	91700-06042-10G-1	Hex Washer Face Bolt
10	72300-A02-100	